

Design and specifications are subject
to change without notice

2DIN IN-DASH CAR DVD PLAYER

User Manual



Car Entertainment System

N Contents

1 Introduction	01
2 Basic Operation	02
2.1 Basic Operation	03
2.1.1 Remote Control	03
2.1.2 Remote Function	03
2.2 About the Rear Output Interface	04
2.2.1 The Sketch Map of the Rear Output	05
2.2.2 The Function of the Rear Output Jack	06
2.3 The Front panel Function Show	07
2.4 The Product Appearance	07
3 Main Function Operation	08
3.1 Basic Operation	08
3.2 Basic Operation of the Touch Panel	09
3.3 DVD Function Operation	13
3.4 TV Function Operation	14
3.5 FM/AM Function Operation	14
3.6 AV Function Operation	15
3.7 CDC Function Operation	15
3.8 Backing Car Radar Function	15
3.9 GPS Function	15
4 The Installation of the Product	16
5 Usage Safety	17
5.1 Warning	17
5.2 Usage Safety	17
5.3 The Point of Disc Usage	17
6 Main Performance	18
7 Troubleshooting	19

1.1 Features

 
1. Built-in DVD, FM, AM, TV, functions, (AV, CDC and GPS functions optional).
2. Full compatible DVD/VCD/MP3/CD/CD_R/CD_RW/MPEGdisc, etc.
3. 7" TFT-LCD vivid screen with 16:9 aspect ratio.
4. Touch panel can operate the characteristic OSD user interface directly.
5. Save the parameters automatically, and default parameters can be restored.
6. 1 channel AV output, very easy to connect with external AV device and compose a perfect car AV entertainment system.
7. 4 channels TV antenna input: receive good and stable TV program in the car.
8. Auto-save function in DVD mode, conveniently watch all kinds of disc continuously.
9. Clock display, get the current date and time at any moment and built-in perpetual calendar very easy for inquiring about the current date.
10. Hi-tech GPS navigation system can connect with special GPS device, making it convenient for driving and reducing the trouble of looking for ways.
11. Auto switch to the backing car display status when backing a car, if external camera is available, the car rear status can be seen on the screen in real time to ensure the safety.
12. Auto mute for answer the car telephone if it is available.
13. Hand brake detecting function, which switches off the TFT display automatically to ensure the safety during driving.
14. Auto detect the small light switch function: if the small light is on, the light of keys will be on and the TFT screen will switch to night mode automatically.
15. Fluorescent remote control, convenient for use in the night.
16. The TFT-LCD angle can be adjusted arbitrarily and the sliding mechanism can be auto-protected.
17. Can connect to the external control keys of steering wheel, easier and more convenient for operation.
18. Control function for external power amplifier, avoiding impactive sound from switching power amplifier.

1.2 Uses

The product has a high-definition TFT-LCD color screen, built-in DVD, FM, AM, TV, optional for backing car radar and CDC, and has connection for rear view mirror and 4 channels audio output, so it is very easy to compose a set of car entertainment system in the center of this product. It is quite convenient and easy to install and connect this product. And it has no radiation, low power consumption. Because the picture has no flicker, view angle can be adjusted arbitrarily, the color is vivid and the product shape is cabinet, so this product can be used for all kinds of car.

2.1 Remote Control Operation

2.1.1 Remote Control

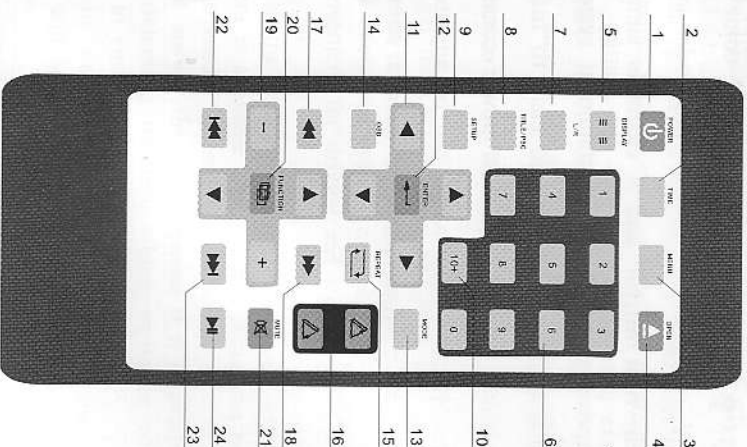

2.1.2 Remote Function


1. **POWER**: Press to turn on the unit, and press it again to turn it off.
2. **TIME**: Press once to turn on the time display and turn it again to turn off the display.
3. **MENU**: Select disc menu in DVD mode.
4. **EJECT**: Eject/Load the disc.
5. **DISPLAY**: Press to display the playback status of the current disc.

Chapter 3 Basic Operation

6. **0-9**: To input digits when selecting track/station, and to select disc number in CDC mode.
7. **CHANNEL**: Press to cycle switching audio channel output in DVD mode.
8. **TITLE/PBC**: Press to return to title status during DVD 1 playback/Switch on/off PBC menu.
9. **SETUP**: Access setup menu to setup the parameters in DVD mode.
10. **10+**: Press to add 10 every time when inputting digits.
11. **UP/DOWN/LEFT/RIGHT**: To select items in DVD setup status.
12. **ENTER**: To confirm the selection of settings.
13. **MODE**: Press to cycle selecting DVD, FM, AM, CDC, TV, AV and GPS mode.
14. **OSD**: Press to display OSD menu, press again go cancel it.
15. **REPEAT**: Press to repeat track, chapter, all disc or cancel repeat in DVD mode.
16. **ANGLE ADJUST**: Press " Δ , ∇ " to adjust the TFT panel display angle.
17. **FAST REVERSE**: Press to fast reverse playback in 2-20 times speed in playback status.
18. **FAST FORWARD**: Press to fast forward playback in 2-20 times speed in playback status.
19. **VOLUME**: Increase/Decrease the volume in normal status.
20. **FUNCTION**: Press to access OSD MENU to adjust the TFT display playback status.
21. **MUTE**: Press once to turn the sound off and press it again to restore the sound in any status.
22. **PREVIOUS**: Press once to skip to the next track in DVD or CDC mode, or skip to the next station in FM, AM, or TV mode.
23. **NEXT**: Press once to skip to the next track in DVD or CDC mode, or skip to the next station in FM, AM, or TV mode.
24. **PLAY/PAUSE**: Press to cycle through playback or pause and in FM, AM and TV mode, it is searching function key.

2.2 About the Rear Output Interface

2.2.1 The Sketch Map of the Rear Output

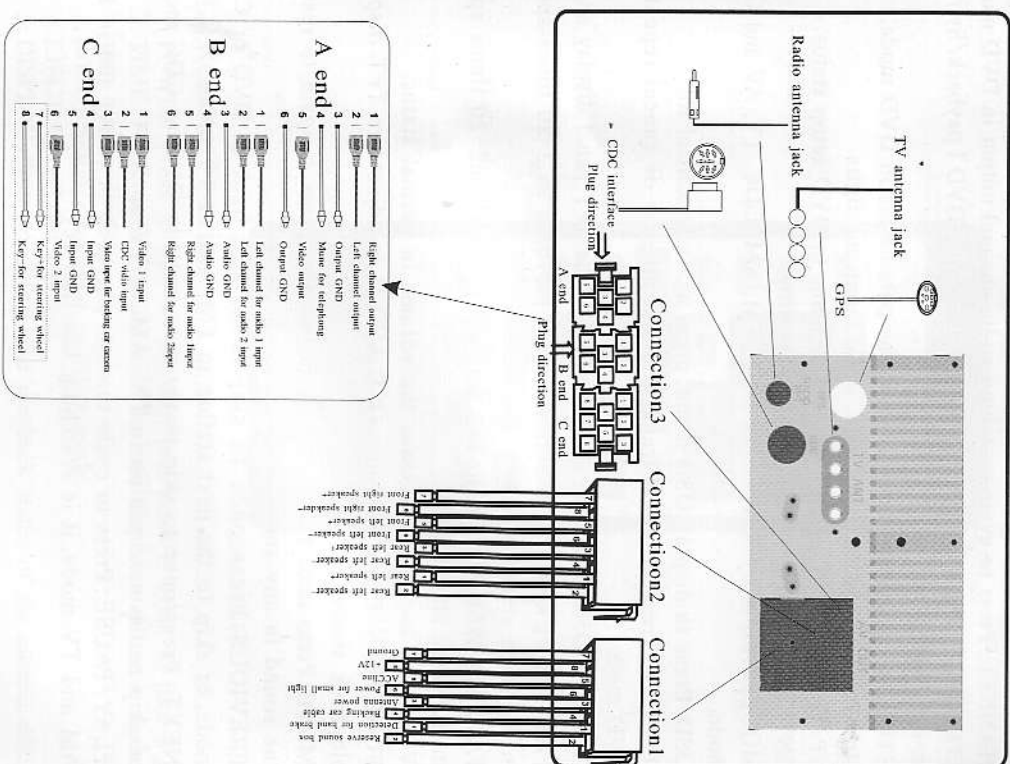

2.2.2 The Function of the Rear Output Jack

● Definition for Connection 1

Detection for hand brake: Connect to the hand brake switch (0V is valid), if the hand brake is released, the TFT screen will be switched off automatically. If it is not connected to the hand brake switch, please connect it to ground, otherwise no picture will display.

Antenna power: Connect to the control end of the motor antenna.

Rear control cable: When connecting to external power amplifier, control the rear amplifier power to avoid impulsive sound.

Backing car control cable: Connect to the backing car switch or back-up light (12V is valid).

ACC (red): Connect to the ACC power switch.

Power of small light: Connect to the control switch of the small light (12V is valid).

12V battery lead: Connect to the car storage battery, is 12V uninterrupted DC power.

Ground lead (black): Connect to the clean and bare metal part of the chassis.

● Definition for Connection 2

Rear left speaker-: Connect to the negative end of the left speaker in the rear of the car.

Rear left speaker+: Connect to the positive end of the left speaker in the rear of the car.

Front left speaker-: Connect to the negative end of the left speaker in the front of the car.

Front left speaker+: Connect to the positive end of the left speaker in the front of the car.

Front right speaker-: Connect to the negative end of the right speaker in the front of the car.

Front right speaker+: Connect to the positive end of the right speaker in the front of the car.

Rear right speaker-: Connect to the negative end of the right speaker in the rear of the car.

Rear right speaker+: Connect to the positive end of the right speaker in the rear of the car.

● Definition for Connection 3

Please refer to the remark narration of the rear panel connection

● **CDC interface:** Connect to Sanyo CDC-6~10DV/DorCD disc box.

Basic Operation

Main Function Operation

3. 1. Basic Operation

1. Power On/Off

Switch on the power using the car key, and turn on the unit by pressing the any key on the front panel, then the system will enter the last status before last power off, and press this key in any status will restore the unit to DVD mode, so you can eject/load the disc. Press the **▲** key for 2second and the unit will eject the disc, if press the key continuously, the unit will be powered off.

2. Function **◀◀** And **▶▶** switch

Press the **◀◀** and **▶▶** key on the front or one the remote control to play previous and next chapter/track/title

3. Function Mode Switch

Press the MODE key on the front panel or on the remote control, you can cycle switching the DVD, CDC, FM, AM, TV, AV and GPS mode, (Note: CDC function is only valid for Sanyo disc box)

4. Function MENU Switch

Press the MENU key on the front panel or on the remote control to display the root menu about DVD

5. Function **⏏** switch

 
press **⏏** key on the front panel or on the remote control to play DVD or pause DVD

6. Volume Control

In normal playback status, pressing the key VOL+/- on the front panel or on the remote control will change the sound volume as your requirement.

7. Mute Control


In normal playback status, if you don't want need audio output, you can press the MUTE key on the front panel or on the remote control. the system will not output audio, press again and the system will exit mute status and restore the audio output.

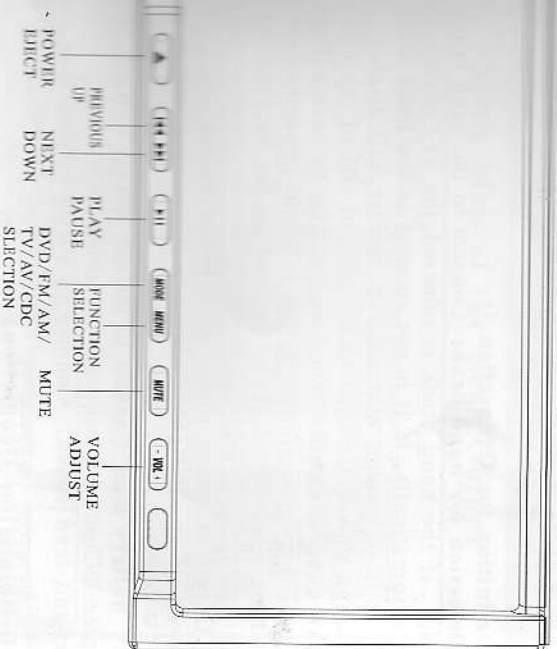

2. 4 The Product Appearance



 The rear panel

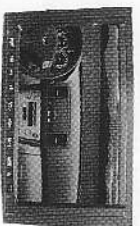

The front panel is closed

Our company is always trying to improve the product quality and release new products, so the product appearance, function or design described in this manual maybe a little different, and the change is not noticed specially, SO please check as the actual product.

8. Turn over the Front Panel


Touch right or left area on up and down of display screen will adjust display angle.

9. Eject the Disc

If the front panel is fully expanded, the disc will be ejected out automatically.

If the front panel is not expanded fully, pressing the EJECT key on touching the "Eject Disc" on OSD menu will eject the disc too.

3.2. Basic Operation of the Touch Panel

 
When the POW or  key on the front panel or the power key on the remote control is pressed, the system will automatically enter before last power off. Now you can operate the unit. This unit has touch panel function, and the main page is as figure OSD-001, including seven functions: DVD, TV, Radio, Disc Box, GPS, AV and Setting. YOU can operate the unit by touching the corresponding icon on the screen, or you can cycle selecting every function by pressing UP/DOWN key on the front panel or on the remote control, the selected item by pressing the MODE key on the remote control or the MENU key on the front panel. Pressing the VOL+/-key can increase or decrease the value needed.

1. DVD/CDC function

Touching the DVD icon, you can enter the page as figure OSD-002.

(1) **Play/Pause**: Touch the Play/Pause icon on the screen the unit will perform the Play/Pause function and display the current status on the TFT screen.

(2) **Skip and Play**: Touch the Previous or Next icon, the unit will jump to the previous or next track every time you touch it.

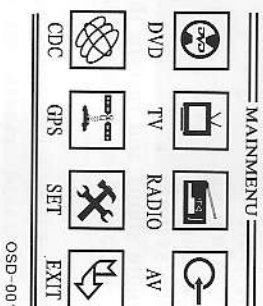

(3) **Main**: Touching it will return to The page as OSD-002. (This function is same in any status.)

(4) **Volume Control**: Press the + or - icon, and the volume can be adjusted as you require. (This function is same in any status.)

(5) **Fast Forward/Reverse**: Touch the Fast Forward/Reverse icon, the unit will play forward or reverse as 2~20 times multi-speed.

(6) **Eject the Disc**: Touch the Eject icon, and the disc will be ejected.

(7) **EXIT**: Touching Exit icon will exit the current OSD page. (This function is same in other status.)

2. TV/AV function

Touching the TV icon in the main page, you can enter the page as figure OSD-003. And the detailed operation can be referred to chapter 3.4.

(1) **TV Type Switch**: You can switch to PAL I/DK/BG/N/M, NTSC MN, SECAM DK/BG/L/L as you need.

 
 
 
(2) **Mute**: Touching the Mute icon, the system will mute, if this icon is touched again, the audio will be Output again. (This function is same in any status.)

3. Radio Function

Touching the Radio icon in the main page, you can enter the page as figure OSD-004. And the detailed operation can be referred to chapter 3.5.

(1) **AM/FM**: Touching the FM/AM icon, you can switch different radio band.

(2) **Search**: (A) Switch to FM or AM band by touching the Band icon, and then you can start the search of full band range (FM 87.5MHz~108MHz, AM 531KHz~1620KHz) by pressing the "P" key on the front panel or the Search icon on the screen. And the unit will save the stations searched automatically. (B) When the search is completed, you can cycle switching station through FM1...FM5, and AM1...AM5 by touching Band icon, or you can listen to the station you need by touching the channel number directly.

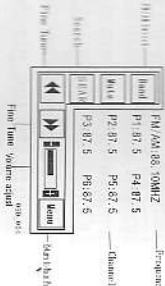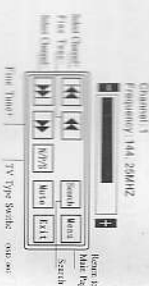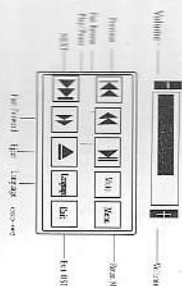


▶ Main Function Operation

(3) **Channel+/-, Fine Tune+/-**: Touching the corresponding icon will perform the corresponding function.

4. AV Function

 Touching the AV icon the main page, you can enter the AV input page as figure OSD-005. And the detailed operation can be referred to chapter 3. 6.




5. Disc Box Function

Touching the Disc Box icon in the main page, you can enter the disc box page as Figure OSD-006. And the detailed operation can be referred to chapter 3. 7.

(1) **Play/Pause**: Touching this icon will play/pause the playback of the disc box.

(2) **Mute**: Touching the Mute icon, the system will mute, if this icon is touched again, the audio will be output again.

 (3) **Select Disc and Track**: Touching the Previous/Next Disc or Previous/Next Track icons will perform the corresponding functions.

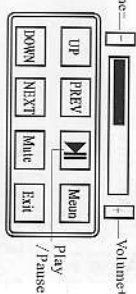


6. Settings

Touching the Settings icon the main page, you can enter the settings page as figure OSD_007.


(1) **Picture Setting**: Touching the picture Setting icon, you will enter the picture Adjustment page as figure OSD_008. You can adjust the picture's brightness, contrast and chroma, increasing/decreasing the value by touching the +/- icon, or you can restore the system default value. There are several picture modes to select: bright, gentl, night, switched by touching the Mode icon as you need. If you touch the Exit icon, the unit will return to the playback status in full screen, and OSD_008 touching the Main Page icon will cause the unit return to the main page.

(2) **Audio Adjust**: Touching the Audio icon, you can enter the audio adjustment page as figure OSD_009.

 Picture Audio Time Buzz settings

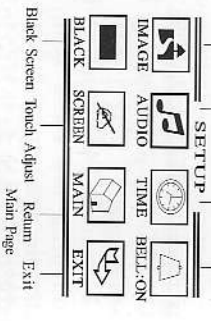

OSD-007

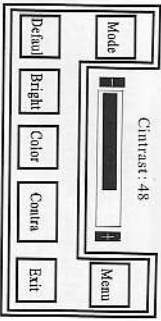 

OSD-008

▶ Main Function Operation

A. Front Left/Front Right, Rear Left/Right: Touching these icons and inputting the "-" and "+" icons, you can increase or decrease the audio volume of the front left/right and rear left/right speakers.

B. After touching the main volume, treble, bass, principal volume, you can change the main volume, treble and bass volume by touching the "-" and "+" in the middle.

C. You have several audio effect to select by touching Audio Effect icon: pop, rock, music, classic, cinema, hall, standard, And you can touch the Main Page, Exit, Mute icon to perform the corresponding function. (These functions have been narrated before.)

(3) **Clock Setting**: Touching the Clock icon, you will enter the clock setting page as figure OSD_010.

 
A. Change Hour: Touch the "Hour" icon and the hour display will turn red and flash. So you can change the hour value by touching "-" and "+" icon.

B. Change Minute: Touch the "Minute" icon the minute display will turn red and flash. So you can change the minute value by touching "-" and "+" icon. (The year, month and day are adjusted in the same way.)


(4) **Buzz On/Off**: Touching the Buzz icon as figure OSD_011, the buzz will be switched off in normal way, and it will be switched on again if you touch the icon once time.

(5) **TFT On/Off**: Touching the Buzz icon as figure OSD_011 will switch off the TFT screen display. On the contrary, entering the settings page and touching the TFT icon again will switch on the TFT screen display, and after you touch the Exit icon, you can see the screen again.


(6) **Touch Panel Coordinates Adjust**: Touch the "Touch Panel Adjust" icon in the setup page as figure OSD_012. point the center of the left upper icon in

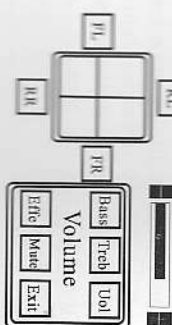

OSD-009

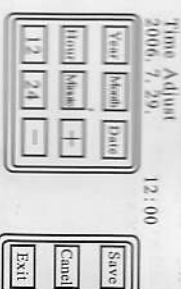 

OSD-010

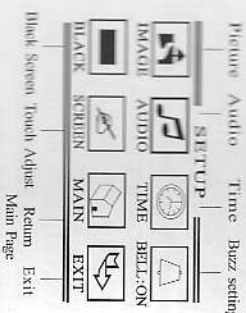 

OSD-011

Main Function Operation

Main Function Operation

The screen and press the 1 Key on the remote control to confirm, secondly point the center of the left downicon in the screen and press the 1 key on the remotecontrol to confirm, and then point the center of the right upper icon in the screen and press the 1 key on the remote control to confirm, lastly pointthe center of the left upper icon in the screen and press the 1 key on the remote control to confirm. Finally press the ENTER key and the system exits, now the coordinates is revised.

(7) **Main Page:** Touch the "Main Page"

icon in the setup page and the system will exit to the main page.

(8) **Exit:** Touch the "Exit" icon in the setup page and the system will exit OSD page and return to the current playback status.

(9) **TFT Angle Adjust:** When video signal is output, touching the left/right down corner will cause the TFT screen raw back, and touching the left/right upper corner will cause the screen extend out.



OSD-012

3. 3 DVD Function Operation

1. Press the "MODE SWITCH" key on the front panel, orpress the "MODE" key on the remote control toswitch the unit to DVD mode. Then press the "▲" on the front panel to slide out the TFT screen and insert thedisc (Note: The lable side should be faced up). Then the disc will be played automatically. If you press the "▲" key again, the disc willbe ejected out automatically.

2. **Pause/Play:** Pressing the PLAY/PAUSE key on the front panel or on the remote control will pause the playback, and pressing again will resume playback.

3. **Audio Channel Switch:** In normal playback status, pressing the CHANNEL key on the front panel or on the remotecontrol will switch the audio channel, such as left/ rightchannel, stereo, audiol and 2, according to the disc.

4. **Skip and Play:** Press the FAST FORWARD or FAST REVERSE keys on the front panel or on the remote control, and theunit will jump to the previous or next track every time you press it.

5. Pressing the REPEAT key on the remote control can remote control can repeat playback of ghe single track, the whole disc or cancel the repeat.

6. In DVD mode, the digital AV file can be played, such as MPEG, MP3, JPEG/GIF/BMP file.

(1) Insert the disc to the loader, the unit will read the disc automatically and enter the AMARTNAVI mode, as showed in the figure below.

(2) When playing MPEG or Mp3 files, the unit will play the music as PLAY MODE, and the playback time, current track and total track number will be displayed on the screen. If playing JPEG/GIF/BMP files, the whole screen will display the current picture file, and continue to display next after 5 seconds . By pressing the STOP key on the remote control will cause the unit return to the SMART NJVI mode.


MP3		1/320 00:01:56	
1	001	6	006
2	002	7	007
3	003	8	008
4	004	9	009
5	005	10	010
File: 001			

7. Setup Menu

In DVD mode, Pressing the SETUP key on the remote control will access the setup menu. (as the figure showed in page13) . Using the UP/DOWN/LEFT/RIGHT and ENTER keys on the remote control can select all the selection items and make settings as personal favorites.

(1) **Basic Operation:** UP/DOWN keys are used to select the selection items up and down, and the LEFT/RIGHT keys are used to switch between the main menu and submenu. The concave item is the item that has been selected, and the reverse item is the item selected currently. And the ENTER key is used to confirm the current selected to becurrent setting. (Note: The UP key is used to retuen to the main menu, too.)


 
▶ Main Function Operation

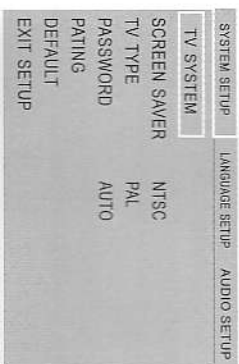

TV SYSTEM: NTSC, PAL, AUTO.
SCREEN SAVER: ON, OFF.
TV TYPE: 4:3PS, 4:3LB, 16:9
PASSWORD: -----
PATING: 1. KID SAFE, 2. G, 3. PG
4. PGIG, 5. PG-R, 6. R,
7. NG-17, 8. ADULT.
DEFAULT: RESTORE
EXIT SETUP



  OSD LANGUAGE: ENGLISH, PORTUGUESE,
CHINESE, LATIN, GERMAN, SPANISH, FRENCH.
AUDIO LANG: CHINESE, ENGLISH, JAPAN, FRENCH,
SPANISH, PORTUGUESE, LATIN, GERMAN,
SUBTITLE LANG: CHINESE, ENGLISH, JAPAN,
FRENCH, SPANISH, PORTUGUESE, GERMAN, OFF.
MENU LANG: CHINESE, ENGLISH, JAPAN, FRENCH,
SPANISH, PORTUGUESE, GERMAN, LATIN.
EXIT SETUP

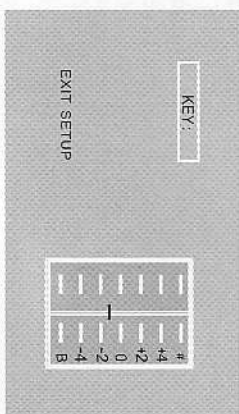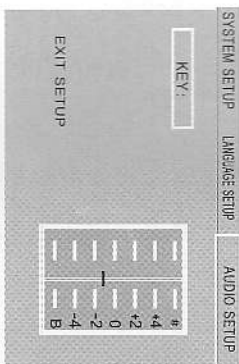

▶ Main Function Operation

3.4 TV Function Operation

1. Press the "MODE SWITCH" key on the front panel or the "MODE" key on the remote control, or touch the TV icon in the screen to switch the unit to TV mode. The unit can save all the TV programs.
2. Search TV Programs: Press the SEARCH key on the remote control, and the unit will start to search TV programs and save all the programs automatically. After the search is completed, the unit will return to the first program and play it. (During searching process, the system is mute). By the way, the "H" key on the front panel or the remote control can be used as search function key.
3. Select Program: Press the "H" or "I" key on the front panel or the remote control to select the TV program you like. Every time you press these keys, the unit will skip forward or backward one program.
4. Fine Tune: When the program picture quality is not clear, you can press the "L" or "R" key to fine tune the frequency of the current program to get the best quality.

3.5 AM/FM Function Operation

1. Press the "MODE SWITCH" key on the front panel or the "MODE" key on the remote control, or touch the RADIO icon in the screen to switch the unit to radio mode.
2. Search Radio Stations: Press the SEARCH key on the remote control, and the unit will start to search radio stations and save all the stations automatically. After the search is completed, the unit will return to the first station and play it. (During searching process, the system is mute). By the way, the "H" key on the front panel or on the remote control can be used as search function key.
3. Select Station: Press the "L" or "R" key on the front panel or on the remote control to select the radio station you like. Every time you press these keys, the unit will skip forward or backward one station.
4. Fine Tune: When the sound quality is not very good, you can press the "L" or "R" key to fine tune the frequency of the current station to get the best sound quality.

➤ Main Function Operation

3.6 AV Function Operation

1. Connect the video input and left/right audio channel input of AV1 or AV2 with the external video/audio device.
2. Switch the system to AV mode by selecting AV mode via touching the main page or pressing the corresponding key on the front panel or on the remote control.

3.7 CDC Function Operation

1. Mode Switch: Press the select key on the front panel or on the remote control, or touch the CDC icon on the touch panel to switch the system go CDC mode.
2. Select Disc: Pressing the numeric key on the remote control can select the corresponding disc number.
3. Play/Pause: When the disc is being played, pressing the PLAY/PAUSE key will pause the playback, and pressing it again will resume the playback.
4. Select Track: Pressing the PREVIOUS key on the front panel or on the remote control will go to the beginning of the current track, and pressing it again within 1 second will go to the previous track. And pressing the NEXT key once will go to the next track.

3.8 Backing Car Radar Function


1. In backing car status, the system will enter the backing car radar display mode. The system configured video backing car radar will display the distance and status between the car and the barrier on the TFT screen. If the distance between the car and the barrier is within the dangerous range, the buzzer will buzz continuously to warn the danger.

3.9 GPS Function

If external GPS device is connected, touching the GPS icon on the screen or pressing the key on the front panel will let the system display to the map on the screen. If the driver sets the GPS system correctly, the system will update the display of the driving route momentarily and prompt the driving route via voice.

➤ The Installation of the Product

The product installation figure as below:

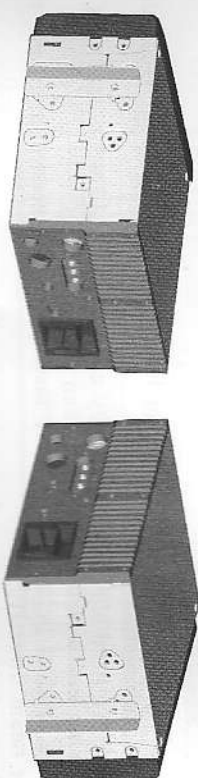

- 1) Put the unit into the installation slot.
- 2) Check the electronic connection is correct or not as mentioned in this manual. (See page4.5)
- 3) Use suitable tools to install the bolts.

⚠ Note:

If possible, this product should be installed by professional technician. If meeting problem, please consult the car maintenance service center nearby.

1. This product only can be used in the cars that have 9-14V DC storage battery system.
2. Please connect every part carefully according to this manual (see page4.5) wrong connection will damage this product.
3. The connection of other parts should be prior to the power connection.
4. To avoid short circuit, any exposed wire thru should be insulated.
5. Before installing the product, all the loose power should be fixed.
6. Please read the user manual carefully before connection.
7. Because this product is high precision device, so the installation environment should avoid:
 - a. The direct sunshine or other over-heating place;
 - b. Non-safe, or vehement shocking place;
 - c. Humid or dusty place.

5.1 Warning

1. Don't put the unit in the rain or humid place in order to avoid the fire or malfunction.
2. In order to abide by the highway code and avoid traffic accidents, please do not watch the video screen while driving.
3. This product belongs to class I laser product, please don't stare the laser beam directly.
4. Nonprofessional person is not permitted to disassemble the unit, If any problem happens, please refer to the professional technician or the specified service. Please do not repair by self.

5.2 Usage Safety

1. While driving, please turn off the TFTscreen.
2. When washing the car, please don't expose the product outside in order to avoid short circuit, fire and other danger caused by water or damp.
3. Please don't locate your car in the sunshine place for long time, which will make the temperature inside the car very high. And please cool the inside of your car before turning on the unit.
4. This unit uses 12V DC power supply, please don't use other unsuitable power.
5. Please don't insert any other things into the disc loader.
6. In order to guarantee the drive safety, please keep low volume as possible and be attention to the traffic status.

5.3 The Point Disc Usage

1. Please don't put the dirty, scratched or distortion disc into the unit.
2. Please don't put the disc on the cuspidal things to avoid scratching the disc.
3. Please don't put disc in the direct sunshine or humid, dusty place.
4. Please don't use abnormal disc.
5. To clean disc, wipe it with a soft, damp cloth. If the disc surface is too dirty, wipe it gently with a soft, damp cloth with propanol. Don't use solute such as benzene, thinner etc...

Power Voltage	(DC) 9 ~ 14V
Max Current	10A
Working Temperature	-20℃ ~ 60℃
Exterior Size	175*100*177 (W*H*D)
Bush Size	196*120 (W*H)

Performance Specification

FM	FM Frequency Range	87.0 ~ 108.0MHz
	Noise Limit Sensitivity (S/N 30db)	15dBu
	S/N Ratio	50db
	Antenna Resistance	75Ω
	Mw Frequency Range	522 ~ 1620KHz
AM	Noise Limit Sensitivity (S/N 30db)	35dBu
	S/N Ratio	40dBu
	Antenna Resistance	75Ω
	VHF-L	49.75 ~ 85.25MHz
	VHF-H	168.25 ~ 216.25MHz
TV	UHF	471.25 ~ 863.25MHz
	TV Type	PAL B/G,I/L,D/K,N,M NTSC M/N SECAM B/G,D/K,L/LL
	Antenna Resistance	75Ω
	S/N Ratio	80db
	Max Output Power	45W*4CH
Video	Video Output Scope	1+/-0.2V
	Video Horizontal Resolution	≥500

▶ Troubleshooting

▶ A Letter to Customer

Simple Troubleshooting

1. No audio output

- Check if the unit is in mute status, if it is, cancel mute.
- Check if the volume is minimum, and increase the volume properly.
- Check if the speakers have been damaged.

2. Disc won't play

- Check if the unit is in DVD mode, if not, switch it to DVD mode.
- Check if disc has been inserted, if not, please insert disc.
- Check if the disc is put upside down, put the disc with the label side facing up.
- Check if the disc is scratched, damaged or dirty, please use good disc.
- The car has been outside for too long time, and the pick-up of the loader is moist. Please try again after power on for half an hour.
- Disc won't play if the temperature outside is below -15°C, so please increase the temperature inside the car to over 0°C.

3. The color of TFT screen is not good

Please press the MENU key in the front panel or on the remote control to adjust the "Picture Setting" menu until the picture gets best quality, or restore the default system value.



Note:

If any problem happens, please do not disassemble the unit by self. It's better send the product to professional person to repair, or send it to the service persons after service to check, lest the problem becomes bigger and unnecessary loss be made.

Dear Customer:

Thanks for purchasing our products. We will provide sound after-sales service guarantee for your product. To protect your rights, please read the following content carefully.

1. The product can be replaced for a new one within 3 months from the date of purchase. And a one-year free warranty is provided for the product.
2. Natopmware warranty: When the product you purchased from our company malfunctions, you can contact the authorized maintenance service center nearby or directly contact our Company. You will be provided with free maintenance service.
3. Warranty is void once the warranty card, purchase proof or product bar code is altered.
4. Detailed written failure symptom shall be sent together with the player for repair.
5. The warranty is only for the player offered by our Company. The following parts or conditions are not included in the warranty range:
 - (1) Consumables such as manuals or presents. When the parts provided by the third party fail, please contact the third party.
 - (2) The customer cannot present the warranty card, purchase proof or product bar code is altered.
 - (3) The product whose warranty period has expired or the product which is not purchased or assembled through regular channel.
 - (4) The product that customer has disassembled or repaired themselves.
 - (5) Failure caused by natural disaster (i. e. earthquake, lightning, fire or flood)
 - (6) Failure caused by the improper use of customers.
 - (7) Failure that is not caused by the inherent problem of the product. Our Company provides paid service for the failure caused by accidents or

improper use . Please contact our Company for detail.
6. The above conditions and terms are subject to the "three-guarantee" regulation of the country.

Please properly keep and use your product to avoid any unnecessary loss.

Product Repair Record

Product model#	
SN	

Repair Record

Date	Type of failure	Service record	Service personnel

Customer Return Receipt

Model		SN	
Customer Information	Name	Tel:	
Purchase Information	Working Address		
	Name of agent / distributor		
	Address of agent/ distributor		
	Telephone No. of agent/ distributor		(Valid with stamp)
Suggestions from customers	Date of purchase	Year	Month Date