



数码摄像机
Digital Camcorder
User's Manual

>>>>

★ Contents

○ Safety Precautions	1
○ Introduction to DV Recorder	1
Including accessories	2
Appearance	2
Fast Guide	3
Key Functions	5
Transmit data to PC	9
Requisite software installation and Usage	9
Troubleshooting	11



Safety Precautions

- Don't attempt to modify or dismantle this Digital camcorder in any method, so as to avoid any damage to the camcorder or electric shock.
- When the camcorder is not to be used for a long time, please take out the battery, so as to avoid energy loss or any damage to the camcorder.
- Don't put or store the camcorder in circumstances with high temperature, so as to avoid any damage to the camcorder.
- For the consideration of safety, please keep the product and its accessories away from kids or animals, so as to avoid any accident.
- In case any liquid or foreign substance enters the camcorder, please stop using it temporarily, and shut it down and disconnect the power, and then resort to assistance from your local distributor.
- Don't operate the camcorder with wet hands, so as to avoid electric shock.
- Don't use the flash lamp before people or animals at a short distance less than 1cm, since too close flashing may cause sight hurt to the objects being shot.
- It is normal that the surface temperature of the camcorder may rise after being used for a period of time.
- Don't touch the lens during usage.

 
© 2004 Sony Inc.
 All rights reserved. No part of this publication may be reproduced, stored in a retrieval system, or transmitted, in any form or by any means, electronic, mechanical, photocopying, recording, or by any information storage and retrieval system, without permission in writing from Sony Inc.



● Introduction to DV Recorder

English >>


★ Including accessories

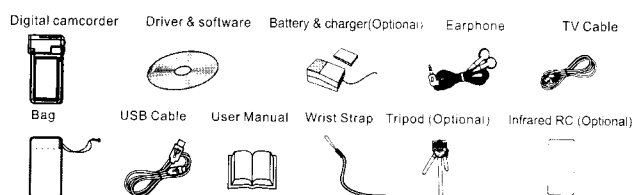

Charging: to select USB connecting line or the charger to charge by the state of shutdown.

Reminder: When purchasing the product, please check the accessories according to the above diagram, so as to avoid any loss!

 ★ Appearance

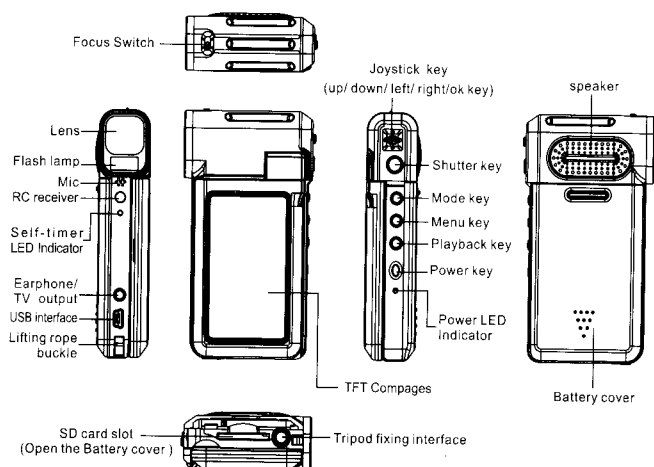

2

● Introduction to DV Recorder

English >>

★ Fast Guide

◆ Load the battery

 
1. Open the battery cover according to the arrow direction.
2. Put the battery into the battery slot according to proper polarity position.
3. Close the battery cover.

◆ Insert and take out SD card (optional)

1. Open the battery cover. Insert the SD card.
2. When the SD card is in use, the built-in memory will be suspended from use.
3. To take out the SD card, please press the card and take it out.

◆ Start the camcorder

1. Press and hold the power key for 1 second, or open the TFT, the camcorder will work.
2. The camcorder will work and the green LED indicator will turn on, Enter into shooting mode.
3. Rotate the TFT as below::



◆ Mode menu

Under the non-mode menu, press the key mode to mode menu, press the key left or right to choose the mode, and press confirm into this mode

◆ Playback key

Under anyone model press the playback key enter into the playback mode, and press the key once again to return to the video recorder mode.

◆ Video recorder mode

1. Press the right key to zoom in digitally.
2. Press the left key to zoom out digitally.
3. Press the menu key to enter the menu options.
4. In the video mode, press the shutter key once to start recording, and press the key once again to stop recording.
5. In the video mode, press the down key switch 4: 3 and 16: 9 mode.
6. Shoot when recording: Press the OK key to shoot when recording. (up to ten photos)


◆ Camera mode

1. To select photo frames, please press the OK key to select frame setting. There are 8 sets of digital frames available.
(The photo frame options work on condition that the resolutions of the camera are 5M, 3M and 1M.)
2. Press the right key to zoom in digitally.
3. Press the left key to zoom out digitally.

3

★ Fast Guide

4. In the camera mode, press the down key to toggle four flashing modes:
(1). off flashing (2). auto flashing (3). red eye reduction (4). forced flashing
5. Press the menu key to enter the camera menu options.
6. In the camera mode, press the shutter key to take a photo.
7. In the mode menu, choose the tow in one mode.
8. In the camera mode, press the up key switch 4: 3 and 16: 9 mode.

 **Note:** Please clean out the lens before record video or take photos.

◆ Playback mode

In the playback mode, there are three modes: voice playback, video playback, and photo playback.

○ Voice playback

1. Press the up/down keys to select a file, and then press the OK key to play the file, repress on the OK key to stop.
2. Press the left/right keys to adjust the volume.
3. Press the menu key to select delete/safeguard functions.

● Video playback

1. Press the up/down keys to select a file, and press the OK key to play; press the OK key once again to pause the playback; press the mode key to back to the main menu.
2. Press the left key to pop up the playback option menu, including fast-forward/fast-backward/volume options.
3. Press the menu key to select delete/safeguard functions.

● Photo playback

1. Press the up/down keys to select a file, and then press the left key to enter the 3x3.
2. Press the menu key to select the delete/safeguard functions.
3. Press the right key to enter the zoom-in/out interface, Then enter into the corresponding operation according to tips.

◆ Voice recording

Press the shutter key to start recording. The display will show the recording time and countdown. During the recording, you can press the shutter key to stop the recording.

◆ Setting menu


Press the left/right keys to select a setting menu, and press the OK key to enter menu options. Then, press the OK key to return.



★ Fast Guide

◆ Music mode

1. You can copy music files from PC to the music folder in the memory of the Digital camcorder.
2. Press the up/down keys to select a song, and then press the OK key to play, and repress on the OK key to pause playing.
3. During the playback, Press the left/right keys to adjust the volume.
4. Press the menu key, choose delete current and delete all music files, press the key to back to the music folder on the playing.
5. Press the shutter key to toggle three playing modes:
 - Repeat all
 - ↺ Repeat one
 - No repeat


 **Note:** Your Digital camcorder can show lyrics synchronously while playing music. To enable the function, please make sure the music file and the LRC file are saved in the same music folder of the memory or SD card.

◆ PC mode

1. Under any mode, POP-up the choose menu when USB cable being connected: PC mode/storage mode.
2. Press the up/down keys to select the "PC mode/storage mode", Press the ok key to choose the mode you wanted.

◆ Reading E-book

1. Press the up/down keys to select a file, and then press the OK key to open the file.
2. Press the menu key to choose delete current and delete all text files, press the key to back to the e-book folder on the playback.

 **Note:** the e-book shall be .TXT file format and store into TEXT document in the built-in or external memory

◆ Game

1. Press the OK key to enter the game status;
2. Press the up key to rotate.
3. Press the down key to drop.
4. Press the left key to move left.
5. Press the right key to move right.
6. On the playing games, press the OK key for fast dropping.

◆ Shut down

Press the power key and shutter the TFT cover, the recorder will be shut down automatically.



★ Key Functions

Power key:	power up/off;
Shutter key:	shoot, start/stop shooting and recording, adjust repeat modes in music playback;
Mode key:	Enter into mode menu, toggle 9 modes including video recorder, camera, playback, voice recording, setting menu, music, PC, E-book, and Game modes;
Menu key:	in video recorder/camera/playback modes, press the menu key to pop up the option menu;
Playback key:	Fast playing the files.
Left key:	select menu options and files left, adjust music volume (-), and digitally zoom out;
Right key:	select menu options and files right, adjust music volume (+), and digitally zoom in;
Up key:	select menu options and files upwards, Choose LCD model.
Down key:	select menu options and files downwards and toggle flash modes;
OK key:	Confirm and select photo frames

◆ Option Function

Video recorder mode		
Resolution	(4:3)	720X480/640X480/320X240
	(16:9)	720X400/640X352/320X176
Frame Rate	30FPS	
	15FPS	
Voice Recording	ON	Audible recording
	OFF	Silent recording
White Balance	Auto	Auto adjustment
	Sunny	For external light source
	Cloudy	For cloudy weather
	Tungsten	For tungsten light
	Fluorescent	For fluorescent light
Image Effect	Normal	Normal effect
	Sepia	Sepia effect
	Black	Black and white effect
Exposure Value	-2.0 ~ +2.0	Adjust the compensation value according to the light condition

★ Key Functions

Camera mode		
Resolution	(4:3)	(16:9)
	12M 4000 X 3000	9M 4000 X 2248
	8M 3264 X 2448	6M 3264 X 1832
	5M 2592 X 1944	4M 2592 X 1456
	3M 2048 X 1536	3M 2048 X 1152
	1M 1024 X 768	1M 1024 X 576
Time Stamp	ON	Show date and time
	OFF	Do not show date or time
Shooting Mode	Single	Single shooting
	Continuous	Three continuous shooting
	10sec Self-timer	Enable 10sec delay auto shooting timer
	20sec Self-timer	Enable 20sec delay auto shooting timer
	Two in one	Two photo synthesize the one photo
Exposure Value	-2.0 ~ +2.0	Adjust the compensation value according to the light condition
Image Effect	Normal	Normal effect
	Sepia	Sepia effect
Scenario	Black	Black and white effect
	Auto	Normal environment
	Scenery	Scenic environment
	Flower	Flower environment
	Night	Night view environment
White Balance	Auto	Auto adjustment
	Sunshine	For external light
	Cloudy	For cloudy weather
	Tungsten	For tungsten light
	Fluorescent	For fluorescent light
Image Quality	Best	Best image quality
	Good	Good image quality
	Normal	Normal image quality

★ Key Functions

Setting		
	Date time	Set date and time
	Version	Current version no / version upgrade
	Language	English, Simplified Chinese, Traditional Chinese, Japanese, French, German, Italian, Spanish
	Beep	ON/OFF
	Power Saving	1 min/2 min/OFF
	TV OUT	PAL/NTSC
	Format	Format the current storage media
	Media	Internal flash/External card
	Frequency	50HZ/60HZ
	Stabilizer	ON/OFF
	Default	Reset to default factory setting
	Start Image	Choose the startup image is the user want
	Screen Brightness	Choose the accurate screen brightness on the different environment
Playback Mode		
Option functions		
Option		Description
	Delete	Delete a single or all selected movie(s), photo(s), voice file(s) or music file(s)
	Startup image (for photos only)	Self define startup image for the current photo
	Rotate	Rotate and save the current photo
	Print (for photos only)	Directly connect to printer to print photos
Support PictBridge system printer		
	Lock	Prevent videos, movies, photos, voice files and Mp3 files from being deleted accidentally
	Crop (for photos only)	Crop a photo to create a new one
	Slide Show (for photos only)	Slide show photos

Note: photos with resolution 4,000x3,000 cannot be rotated.

★ Transmit data to PC

Open "My Computer" on the desktop. There is a removable disk icon: if there is no SD/MMC card, the internal memory is the removable disk; if there is a SD/MMC card, it is the removable disk. In the memory mode, you can use Windows interface to access data in the recorder, including cut/copy/delete files in the recorder.

★ Requisite software installation and usage

You can use PC to use and operate the memory offered by the camcorder as well as its web cam function. Before the use, please install the software driver.

◆ Install driver

To use the video communication function, please install the driver for your current operating system. Click the corresponding driver in the installation CD.

Note: Before installing the driver to the PC, do not connect the camcorder to the USB port of the PC, so as to avoid driver installation error;

◆ Media Converter


You can use your PC to convert movies, audio files and pictures and then download to your DV recorder. Before that, please install the media converter tool.

◆ Software installation

Click the "Install Media Converter" button in the software installation interface. After the installation, there will be a shortcut icon on the desktop. Directly click the icon to run the software.

★ Requisite software installation and usage


- The media converter runs as follows:

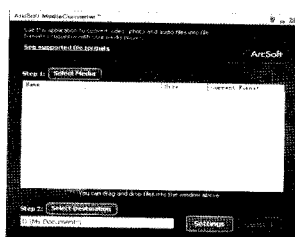

1. Click the "Select media file" button to open the file selection dialogue box. Select your desired video file to convert and confirm;
2. Click the "Select target file" button to open the file selection dialogue box. Select the folder to save the converted video file and confirm.
3. Click the "Convert" button to start the conversion.

◆ Senior setting:

- Click the "Setting" button to pop up the above window.:

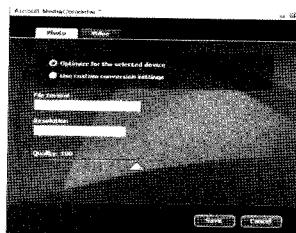

Click "Video", "Audio", or "Photo" button to toggle video/audio/photo setting windows.

★ Troubleshooting

- ◆ I cannot take a photo or video or record voice?
Change the resolution, image quality or frame rate setting, or change another storage card with sufficient free space; check whether the storage card is locked; delete some files.
- ◆ The indicator is not on when the camcorder is being charged?
Reload the battery according to correct polarity; make sure that the AC power works properly; re-plug the power adapter.
- ◆ The flash lamp cannot flash?
In shooting pictures, if the battery is low, the flash lamp will not work.
- ◆ How to take good photos?
Please make use of the tripod. In dark places, please use the flash lamp or lights to compensate light.
- ◆ The picture in the viewfinder with dirty mark?
Please clean out the lens.
- ◆ Camcorder shows no memory space for record vide?
When the memory space less than 4MB, the camcorder will show memory space is full and can not record video.