

For your proper use of the digital player, it is highly recommended that read this User Manual carefully to fully understand every detail information and operation of the media player

- Do not place the product in high-temperature, damp or dusty areas, especially inside a parked car in summer.
- Do not cause excessive impact on the TFT screen by dropping it. Or it may cause damage to TFT screen.
- Keep the volume at a moderate level. If you feel a ringing in the ear(s), lower the volume or stop using the earphone or headphone.
- Fully charge the battery if any of the following conditions exist:
  - A. The power sign is shown empty;
  - B. Power off automatically, and could not power on again;
  - C. Unable to operate the keys

Note: Always use the adaptor provided by or approved by our company. Please be aware that we claim no responsibility for damage from using other type of adaptor.

- Do not disconnect the player from your computer during file transfer, this may cause damage to data and the player.
- Do not disassemble this product on your own. Never clean the product with chemical substances such as alcohol, thinner or benzene.
- Do not use the product in prohibited areas to electronic device.
- Do not use the product while driving or walking in street, this may create a traffic hazard.
- Avoid play music or video during USB cable connected.

※ All rights for improving products are reserved! Product specifications and appearance are subject to change without prior notice for further improvement.

★ The player is no waterproof function.