


# User manual

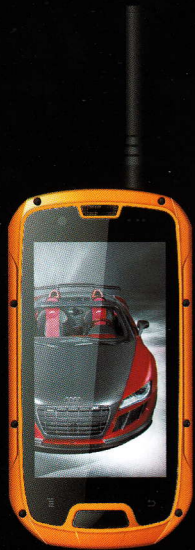


## S09 Quick Guide

### Started to use your phone:

Power on: Press and hold the power key button for 3 seconds

Power off: Press and hold the power key button for 3 seconds, select 'switch off' in the menu option.

### picture:

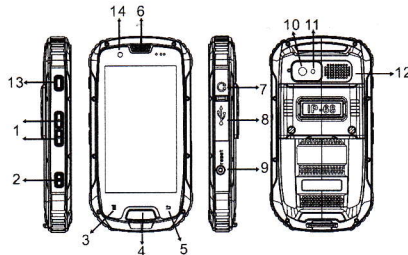

- |                   |   |
|-------------------|---|
| 1) Volume buttons | 11) Flash   |
| 2) Power button   | 12) Speaker   |
| 3) Menu key       | 13) PTT: only can be used on software push to talk. |
| 4) Home key       | 14) Front camera                                    |
| 5) Back key       |   |
| 6) Earpiece       |   |
| 7) Earphone jack  |   |
| 8) micro USB port |   |
| 9) Reset key      |   |
| 10) Rear Camera   |   |

Menu Key: Select to show the available menu in current screen.

Home Key: Return to home screen. To view recent application, press and hold the home key.


Back Key: Return to previous screen.

Volume Key: Adjust the volume of ringtone.

Reset Key: Restart the phone.

### Insert the SIM Card and T-Flash card:

1. Remove the battery cover: Loosen the screws on the back side – to rotate both the screws anti-clockwise until open the back cover as shown in IMAGE 1

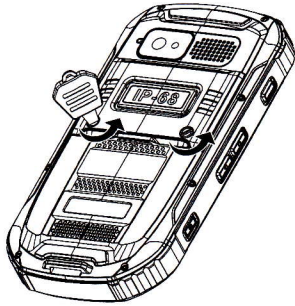


2. battery: It's fixed and non-removable battery inside.

3. Put the SIM Card in the SIM holder:


3

Put the SIM cards into the slot touching the SIM contacts of the phone as shown in IMAGE-3:

upper SIM slot is for WCDMA 3G SIM:

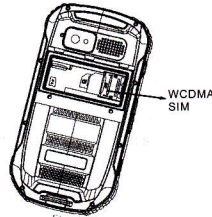


Underneath SIM slot for GSM:

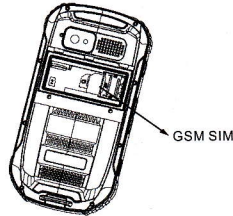

4



**Note: When inserting the SIM card, ensure that the golden contacts faces right position.**

4. Insert T-Flash card: insert T-Flash card into the slot as shown in IMAGE4.

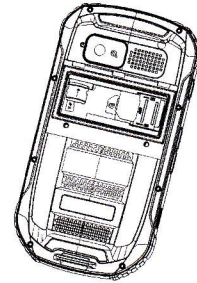

5. Insert the battery cover: Insert the back cover and rotate two screws clockwise to lock the back cover.



5

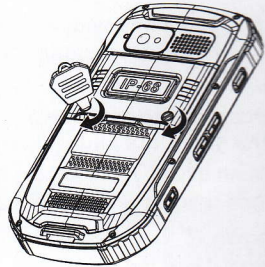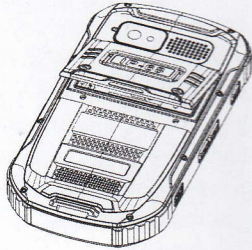

**⚠ATTN: Please power off the phone before plug in or pull out the SIM card and T-Flash card.**

### **Charging the battery:**

Before charging the battery, ensure that it has been properly inserted into the phone as image shown.

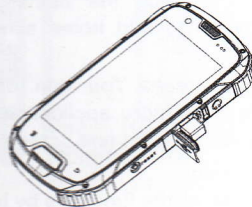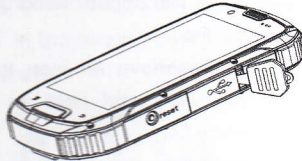

### **T-Flash card:**

Please setup T-flash card before using your phone, otherwise the applications cannot be installed and some functions are not available, for example, camera, recorder, etc.

#### **1. Use the T-Flash card in the phone as USB storage.**

Connect the phone with computer by using USB cable. The computer will pop up the windows to let you install the phone USB driver.

If you only wish to use the the T-Flash card in the phone as a USB storage, you can ignore those windows and click Cancel always. Slide Message Board as shown in the screen below. And then click USB connected->Turn on USB storage to use the T-Flash as USB

storage.



You must setup the phone USB driver in your computer if you wish to use the PC Suite to synchronize phonebook, Message, Calender and others with your computer. The phone USB driver can be downloaded from SD-card.

## 2. Remove the T-Flash card safely

Please enter Settings -> SD card & phone storage -> Unmount SD card to remove the T-Flash card safely.

### Using of touch screen:

**Single Click:** To select an icon. For example, click dial to open the keypad

which will be displayed on the screen.

**Double Click:** To zoom-in or zoom-out. For example, to zoom-in or out of a photo, click twice when viewing a photo or browsing on the internet.

**Hold:** Click and hold the screen, icon or input box to get more operation options.

- 1) When clicking on a contact from the contact list for a long time, an operation menu will appear according to the contact list.
  - 2) To rearrange/move an icon to the home screen, click and hold an icon within the menu list.
  - 3) Long-Time Click the blanks of home screen to add home screen shortcut.
- Drag the screen: You can drag the screen to view more applications which is not be displayed in one screen.

### Home screen:

You can use all the functions by touch

screen. Click the icons to open the applications. Check all the applications so it is functioning properly.


In total, there are 5 home screens in the phone, when you slide to the left or to the right this will move the screen from one to another. To create shortcuts and widgets, tap and hold at blank area on any of the screens. You can return to the home screen by pressing the Home key in any screen you are on.

### Create shortcuts and widgets:

Press and hold the APPS, and drag on the desk.

Select create shortcuts or widgets.

### Delete the shortcuts and widgets

To delete an object, tap and hold the object, then drag it towards the bottom of the screen . When the object turns red let go of it and the selected object will be deleted.

## Lock the screen

Lock the phone in order to avoid useless operation and to save the battery by press the power key.

The phone will automatically lock when it is not being used for some time. Unlock the phone

Press either the power key, menu key, home screen key or back key to enter the unlock interface ,and then slide any direction to unlock.

## Message board

Slide Message board bar in any screen to open message board where you are able to check for unread notifications

## Manage applications

Install applications: You can install .apk application among File Manager and set it up step by step

Uninstall application: Enter

Settings->Applications->Manage

applications, then will be able manage and remove installed applications.

## Recently used applications

Press and hold the home key, the screen will display a window which shows your recently used applications.

Click the icon to open the application.

## Analog Walkie-Talkie

Click the Icon of Intercom and Enter the settings of Walkie-talkie as shown:

1) ON/OFF: to choose ON/OFF for using of Walkie-Talkie as **Part 1**,

2) Set parameter:


In this menu, it includes 2 defaulted Group and 2 custom Group as **Part 2**, For default Group 1 and Group2, Users can choose same group to share the Walkie-Talkie functions.

For custom Groups, Users need to set the same parameters before using the

custom group, details as custom Groups guide :


3) Reset button: delete previous parameter

preset as **Part 3**

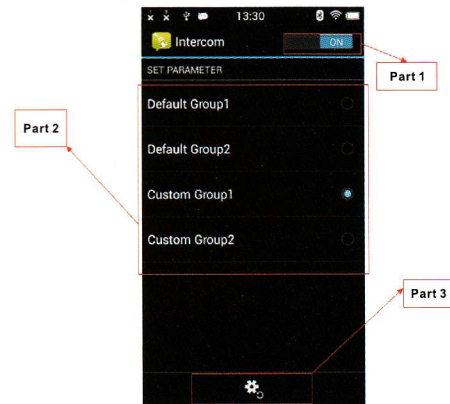



custom Groups guide:  
Choose one custom group like customer group 1, you see the submenu below:

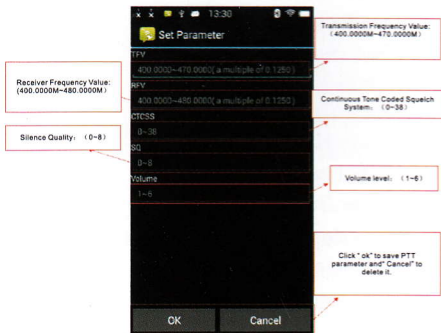

**Note:**  
RFV(Receiver Frequency Value) AND TFX(Transmission Frequency Value) can be the same or not, but all the frequency should be set as any multiple of 12.5K. all the parameter must be set as requirement, otherwise it can't be work as normal

Walkie-talkie distance: 3-5 km, working time: more than 3hrs, but depends on networks and environment.

### **Extend the battery life:**

Some functions may use up more power, which eventually shorten the battery life. You could:

Close all the wireless connection when not in use i.e. BT, Wi-Fi or GPS

Reduce the brightness and shorten the screen timeout to save battery, or press power key to shut down the screen when the phone is not in use. Close any automatically synchronized applications such as Email, calendar, contacts and other.

Some applications which are downloaded could also shorten the battery life.

### **Note:**

**This product is designed as shockproof phone, however, please don't hit the phone intentionally. The brutal manipulation may bring damages to the performance of your phone, and it will be no longer under warranty.**

**Locked the back cover after put the T-flash card and SIM cards.**