1. The dome is unscrewed by hand easily.

2. Once done, it is possible to unlock the bottom plate by pushing a small piece of plastic with a pen or screwdriver.

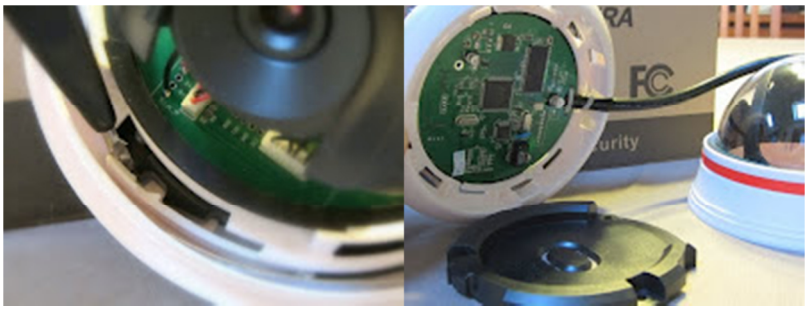

3. This plate has to be fixed first on the ceiling. 3 screw holes are present (Screws are provided). If you're challenging this camera for outdoor use, you may want to tape the center to help prevent humidity to get in.
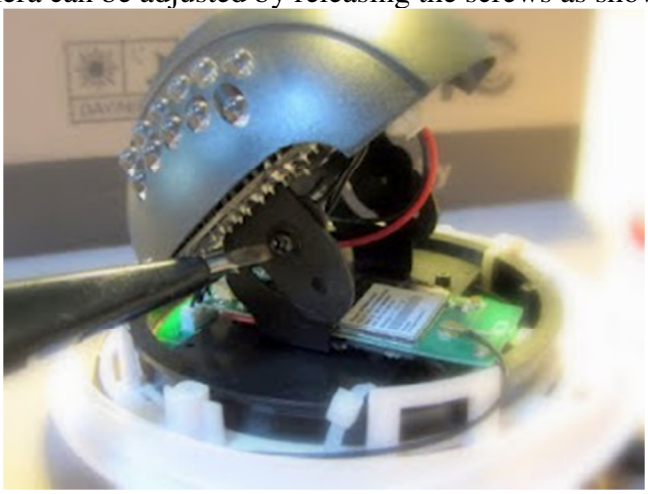
4. The angle of the camera can be adjusted by releasing the screws as shown on the picture.