

Volume buttons +/-

Power button

LCD


screen

QUICK GUIDE GUIDE DE D MARRAGE RAPIDE GUIDA RAPIDA GUIA RAPIDA KURZANLEITUNG

HERO VE



01

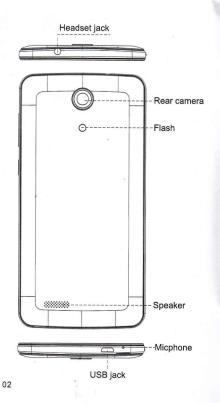



To open the back cover, lift from the bottom notch and pull up until the cover comes off.



Match the metal contacts of the phone with the battery contacts when inserting / removing the battery.

Note: In order to avoid unnecessary damage to the body and battery, please turn off the phone before removing the battery.

03

Power On



- 1. Press and hold the power button **(**) until the screen turns on.
- 2. Wait a few seconds for the phone to power on.

Unlock and Lock screen



Press (1) and swipe up on screen to unlock.

Lock Screen

Press (1) at any time and the phone will lock and enter standby mode.

Button



⊲ Back Button : Return to previous screen

O Home Button: Return to home screen

☐ Recent Apps button : Displays recently used applications

Home screen

You can tap the icons to open the corresponding applications. You can also swipe left and right to see more applications.



Applications Menu

Start Applications

In the applications menu, tap the app you want.

06

Dial

Press then search contacts or enter the phone number then press to dial out. If you want to delete the number, press x.

End calls

Press oduring the call.

Messages (SMS/MMS)

Sending

- 1. Press to enter the messaging app.
- 2. Press at to create a new message.
- 3. Press 🛼 to add one or more contacts.
- 4. Press 🛟 to insert pictures, audio and video.
- 5. Press > to send your message.

The WEEE marking on this product (see right) or its documentation indicates that the product must not be disposed of together with



household waste. To prevent possible harm to human health and/or the environment, the product must be disposed of in an approved and environmentally safe recycling process. For further information on how to dispose of this product correctly, contact the product supplier, or local authority responsible for waste disposal in your area.

Declaration Of Conformity

We the Shenzhen ZOPO Communication Equipment Co.Ltd.

Address: Floor 23, Haowei Technology Mansion, Keji south eighth Road, Gaoxin Sci-Tech.

Park(South Zone) Shenzhen, China

Product: MOBILE PHONE

Model No. : HERO 1, Trade Mark: ZOPO

Here by declare that the ZOPO MOBILE PHONE complies with the standards and provisione of the

Directives:

Directive (2011/65/EU)-ROHS

Directive (1999/5/EC)-R&TTE

In addition to the following harmonized

standards:

FN60950-

1:2006+A11:2009+A1:2010+A12:2011+A2:2013

EN50332-1:2000, EN50332-2:2003,

EN62471:2008,

EN50360:2001+AC:2006+A1:2012, EN62209-1:2006, EN62209-2:2010, EN62479:2010, EN50566:2013+AC:2014, EN301 489-1 V1.9.2, 07

EN301 489-3 V1.6.1, EN301 489-7 V1.3.1, EN301 489-17 V2.2.1, EN301 489-24 V1.5.1, EN300 440-1 V1.6.1, EN300 440-2 V1.4.1, EN301 511 V9.0.2, EN301 908-1 V6.2.1, EN301 908-2 V6,2.1, EN301 908-13 V6.2.1, EN300 328 V1.8.1 . The procedure for the decaration of conformity, set out in Article 10.5 of R&TTE Directive 1999/5/EC, was conducted under the supervision of the following organization:

PHOENIX TESLAB GmbH, Königswinkel 10
D-32825 Blomberg, Germany,
www.phoenix-testlab.de
Phone: + 49(0)5235-9500-24

Fax: + 49(0)5235-9500-28

The maximum SAR value tested on this device when used in its normal position at the head is 0.422W/kg and 0.733W/kg when used close to the body, at a minimum distance at 15mm.

Note: For use at the body, please keep a distance of 15 mm between the appliance and your body.

Kevin Xu CEO