



inWatch Color  
User guide

## Welcome

Welcome to use inWatch Color smart watch and start your healthy lifestyle

Choosing inWatch Color means not only choosing a high-quality smart watch, but also a long and healthy lifestyle for you and your families in the future. You can get professional health plans and daily reminders with your daily health data monitored and enjoy sweet health care service from professional doctors as well. Health will be a part of you fashion life.

inWatch Color smart watch will help you in fashion and stay healthy.

## To keep you company

Introduction to its accessories

The standard package of inWatch Color includes:

- 1) One inWatch Color watch
- 2) One Charging dock

Notifications:

There is no need to replace the battery for inWatch Color because it has already had a lithium battery within it before delivery.


## Portable

### Guide

The way to charge:

1) As the illustration shows, place the watch on the charging dock and make sure that the contact on the watch's back case comes into contact with the pin on the charging dock. Power on the charging dock to start charging.

2) When the watch gets 0~9% charged, the fourth LED light will light up.  
When the watch gets 10~19% charged, the fourth and the fifth LED light will light up.  
When the watch gets 20~29% charged, the fourth, the fifth and the sixth LED light will light up. By analogy, the watch gets full charged when all the 11 LED lights light up.

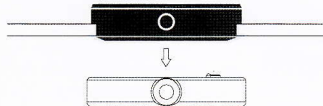

## Portable

### Guide

The way to operate  
inWatch Color watch is in standby mode before delivery, and you need to activate it for the first use. Press the crown down for about 1.5 second till the 11th, 12th and 1st LED lights flash, which indicates the watch is powered on.

### Time Display

Just raise your hand and it will show time.  
When the hour hand and minute hand are not overlapped (e.g. 12:10), the hour hand will light up for about 3 seconds while the minute hand flashes 3 times.

When the hour hand and minute hand are overlapped, (e.g. 12:00), the hour hand will light up 1 second while the minute hand flashes twice.

### Time algorithm: round

Round down: 2 is rounded down to 0. e.g. 2:11 is rounded down to 2:10.

Round up: 3 is rounded up to 5. e.g. 2:14 is rounded up to 2:15.

### Notification:

The time of inWatch Color shows as the time of the device to which it's connected, with tolerance less than 3 minutes.

## Go As you wish

### Cellphone synchronization guide

### Device Adaptation

inWatch Color smart watch is compatible with cellphones with Bluetooth 4.0 (or higher configuration) technology. Before connecting the watch to the device, please check the device has downloaded App inHealth that's compatible with your cellphone.

### Operational System Adaptation

iOS 7.0 or updated version

Android 4.3 or updated version

## Go As you wish

Cellphone synchronization guide

The installation of inHealth

InHealth is a cellphone application software for inWatch. After connect to inWatch Color smart watch, it can help you manage the watch, check the health data in real time and even offer you customized notifications and advices on your health. You can download and install inHealth App for free by scanning the following 2D barcode.



## Go As you wish

Cellphone synchronization guide

The application and synchronization of inWatch

To connect the watch

Run the App inHealth of cellphone terminal, register by following the reminders and bind your watch with your phone (Users with an account number could log in directly)

To synchronize the data

To synchronize the data on the cellphone: enter the APP interface, pull down the interface to refresh it.

Notifications:

Please perform synchronization with your Bluetooth open and network available.

## Go AS You Wish

inWatch Color watch + inHealth

With the help from inHealth, inWatch Color watch could realizes the following purposes through data collection and analysis of your settings:

Step Recorder

Recognize your moving status and record steps and calories. When the goal is reached, a Draw Marquee-LED Banner will display to keep reminding and encouraging you to stick to the healthy lifestyle.

Sleeping Detection

Enter the sleep mode or exit from it by double-clicks on the crown. Recognizing your sleeping status and quality intelligently and recording your sleeping quality.

Intelligence notifications

Call notification \ message notification  
Alarming clock notification \ low battery notification

## Go AS You Wish

inWatch Color watch + inHealth

The relationship between reminders and flashes

Reminder type	Standard mode	Flashing LED Lights at clock position
Call reminder	flash and vibrate 1 time	3, 6, 9, 12
Message reminder	flash and vibrate twice	3, 6, 9, 12
Bluetooth connection	flash 1 time	11, 12, 1
Bluetooth disconnection	flash and vibrate 1 time	11, 12, 1
To start sleeping detection	flash twice	3
To end sleeping detection	flash 3 times	3
Alarming clock reminder	flash and vibration	11, 12, 1

Low battery reminder

When the battery is lower than 20%, number 4, 5 and 6 LED lights will flash with an interval of 5 minutes to remind you to charge. When the battery approaches 5%, the battery will start low battery protection automatically. When you find all the functions are shut down, press the crown, and the LED light in the 2 o'clock direction will flash, which indicates that the watch is in the low battery protection mode and is in need of charging in no time.

## Go AS You Wish

The combined function of inWatch smart watch and inHealth

The relationship between completed exercises and flashes

Click the crown to check out the exercises

Completion	Solid LED light (in the form of Draw Marquee-LED Banner, the following lights will flash)	Flashing LED
0%	4	4
10%	4, 5	5
20%	4, 5, 6	6
30%	4, 5, 6, 7	7
40%	4, 5, 6, 7, 8	8
50%	4, 5, 6, 7, 8, 9	9
60%	4, 5, 6, 7, 8, 9, 10	10
70%	4, 5, 6, 7, 8, 9, 10, 11	11
80%	4, 5, 6, 7, 8, 9, 10, 11, 12	12
90%	4, 5, 6, 7, 8, 9, 10, 11, 12, 1	1
100%	4, 5, 6, 7, 8, 9, 10, 11, 12, 1, 2	2

inWatch Color smart watch and inHealth will keep upgrading constantly and adding new functions by upgrading its software. Visit [www.inwatch.cc](http://www.inwatch.cc) for details or call the service phone: 400-838-0108

## Go AS You Wish

Specifications of inWatch Color smart watch and inHealth

Category	Project	Configuration	Remarks
Data upload	To synchronize with APP on the cell phone	Connect to the phone through bluetooth	
System	Dial	Toughened glass	Can be purchased on the official website
	Display	NO	
	Bluetooth 4.0	Supportive	
	Band	Silicon band	
Hardware	Case	Zink alloy	Save 7 days exercise data
	MCU	Nordic 51822	
	G-Sensor	LIS3DH	
	Motor	Supportive	
	Indicator light	12 LED lights(white)	
	Crown	one	
Software	Charging port	Magnetic Charging	Android 4.3, Iso 7.0 or higher version
	Health data synchronization call/message/ alarm/ low battery notification	Supportive	
Accessory	Battery	Lithium Battery	Capacity: 65mAh stand by time: 30 days

## inWatch Color

inWatch Color smart watch

Professional wearable device

If you have any questions about inWatch Color smart watch or wearable device, please feel free to contact us. Thank you for your long-standing trust and support for us. Now start your new healthy lifestyle with inWatch Color.

Contact us:

inWatch official website: [www.inwatch.cc](http://www.inwatch.cc)

inWatch official Sina Weibo: @inwatch

inwatch warranty service hotline: 4008380108

