

Unik 2

Declaration

1. All rights reserved. No part of this publication may be reproduced, redistributed, resold or loaded without the prior written permission of our company.
2. In the preparation of this manual process has sought to ensure the content is accurate and complete. But the manual does not guarantee that any errors or omissions. The company will be held liable for errors that may appear in this manual.
3. Information contained herein is subject to change without notice.
4. Neither nor such other part who may be the owner of the Proprietary Information accepts any liability whatsoever for any direct, indirect or consequential loss arising from any use of such Proprietary Information.

Cautions

Guideline for safe and efficient use, please read this information before using your Bluetooth smart watch named Unik 2. These instructions are intended for your safety, please follow these guidelines.

1. Do not drop, throw or strike your watch.
2. Do not make your watch close to benzene thinner and other chemical materials.
3. Do not make your watch close to magnetic material.
4. Do not expose your watch to extreme sunshine and high humidity.
5. Do not attempt to disassemble or modify your watch.
6. Do not dispose the package, battery and waste electronic equipment.

Introduction

This is a Bluetooth smart watch. Following are the main functions:

1. Pedometer: You can use it to monitor the steps you take everyday (You can also check the complete sport process while installed DroiHealth application).
2. Notification: There's icon display on the screen if there's missed phone calls, SMS, Wechat messages.
3. Sleep monitor: It can monitor your sleep condition. You can check the sleep data by DroiHealth.
4. Counter clock: You can set a count down time on the screen, to schedule your sport time.
5. Alarm clock: Connect your watch Unik 2 with DroiHealth in order to set the alarm clock time. You can set 5 clock time.

6. Equipment status: The display screen could show the battery and Bluetooth connection status.

Anti-lost: Check OK button to turn on/off this feature. (You need to install DroiHealth on your phone, and grant related privilege)

Firmware version: Check current version

Reset: Reset to default

How to install DroiHealth on your phone

Picture:



For iOS

iOS APP could download by searching DroiHealth in APP Store.




For Android

Scan below QR code to download Android APK.

Compatible with iPhone 5/5s/6/6Plus and above with iOS 7.0 and above. Compatible with any device with Android 4.3 and above.

Graphic

Picture:

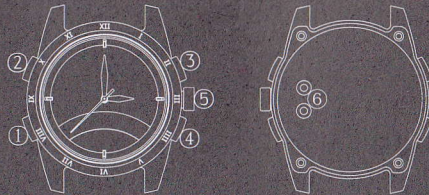


- ①Power on/off button: Long press it to turn on/off the device. Short press it to return back to upper class menu.
- ②OK button: Short press to turn to menu screen or turn on some function.
- ③Next button: short press it to scroll menu
- ④Previous button: short press it to scroll menu
- ⑤Knob: adjust the clock time
- ⑥Charging jack

Connect Unik 2 with Phone APP

Open the DroiHealth, register or login refer to the tips. Search Unik 2 in the device management screen. When the Bluetooth sign showing, it means the watch has connected with phone.



Picture:

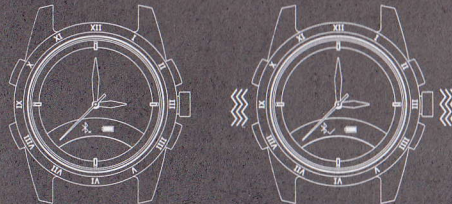

Disconnected

Connected

How to charge Unik 2

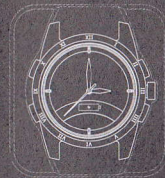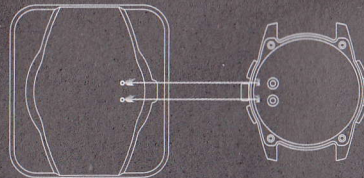

Charging

Before using, please charge the device more than 1.5 hours firstly. Please use the matched charger.

Remark:

- 1.Phone charge connector 5V/1A is matched. Or you can plug it to PC USB port
- 2.Place the watch to the charging base with the correct direction(refer to above diagram)

Troubleshooting

- No connection to the phone.
Make sure that Unik 2 has power and the phone within range . A maximum distance is 10 meters and no solid objects are in between.
- Unik 2 turns off automatically.
The battery level is too low. There's warning on the screen about the low battery. Please charge the battery.
- Unpredicted Problem:
Reset the watch.

www.imacwear.com