


English

BLUEZ Bone Conduction Headset Keep ears open, be aware of surroundings

Part description



Accessories

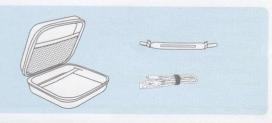

USB to micro USB Charging Cable	1
Tension Band (with instruction sheet)	1
Warranty Registration Card	1

Features

- Open Ear design to keep aware of surroundings.
- Stereo Bluetooth headset with wireless phone and music functions
- More comfortable and stable for extended use

How to wear

Place the wraparound head band behind your neck with the transducers resting on the bone in front of your ears, not on your ears,








Note:

The adjustable (and removeable) **Tension Band** on Bluez is recommended for those who have a small head or feel Bluez is not secure on their head. Adjust to fit or remove the **Tension Band** as needed.



How to charge

Connect Bluez to a standard USB port on your PC or a wall charger via the USB charging cable. Bluez will fully charge in 3 hours. The LED Indicator will show solid red when charging, and will turn solid blue when charging is completed.



Note:

It's recommended to charge Bluez before using for the first time. Bluez is not functional while charging.

How to pair

- 1. Slide the Power Switch on Bluez to the "ON" position.(green)
- 2. Locate the Bluetooth menu on the device and select "AFTERSHOKZ" .
 - If Bluez is pairing with a device for the first time, it will enter the pairing mode automatically. The LED indicator will flash blue/red.
 - Bluez will automatically reconnect with a device that was previously paired in less than 18 seconds. The LED indicator will be flash blue.

- To pair with another phone or re-pair with a device, press the **Play Button**and hold for 5 seconds to enter manual pairing. The LED indication will flash quickly blue/red.



Note:

If out of range while connected to a device (more than 33 feet/10 meters), Bluez will disconnect from the device. Once Bluez is back within range, it will automatically reconnect. However, if Bluez is disconnected

for a long time(more than 3 minutes), you may need to press any button on the headset, to reconnect the device.

If the device is turned off while connected to Bluez, Bluez will disconnect from it. When you turn on the device again, just press any button on Bluez to reconnect manually.

LED indication

	Status
Red(quick flash)	Low battery
Red(solid)	Charging
Blue(solid)	Charging complete
Red(quick flash four times when shutting down Bluez)	Less than 2 hours working time
Blue and Red(flash)	Pairing
Blue(quick double flash)	Discoverable for pairing
Blue(slow double flash)	Bluez and a paired mobile phone arenot connected. One of them is not turned on,or the two are more than 33 feet (10m) apart.
Blue(slow flash)	Connected, making a call , streaming audio
Blue(quick flash)	Receiving a call

- Chartes	Control	Audio tone
Answer a call	Press Call Button	Two notes
listacal	Press Call Button	Single beep
Next a coming call	Hold Call Button for 1 seconds	Two notes
audio to your mobile	Hold Call Button for 1 seconds while on call	Single beep
Ancori last call	Press Call Button twice	Single beep
Value control	Hold Call Button	Single beep
Williame control	Press Volume Control	Single beep
Willie Ummute a call	Press Play Button while having a call	Single beep
Pause music players music players phone. (*)	Press Play Button once	No
Previous/next song	Hold Volume Control for 2 seconds	Single beep
Power on	Slide Power Switch to On position (green)	Four notes (ascending)
Power off	Slide Power Switch to Off position	Four notes (descending)
Eluetooth disconnect		Three beeps
Bluetooth connect		Three beeps
Low battery		Beeps three times every two minutes

This function may vary on different types of smart phones, depending on the operation system and software on your phone.

Trouble shooting

	Possible Problem	Resolution
Does not turn on	Check if the battery is fully charged	Charge the battery
Does not reconnect automatically	Bluez entries standby mode	Press any button to reconnect manually
Unable to pair	Bluez doesn't enter pairing mode	Press the Play Button and hold on for 5 seconds to enter Manual Pairing Mode
People on the other end of a phone call can't hear you.	The Play Button was pressed during the call, so the microphone of Bluez is muted.	Press Play Button again to turn off mute function.

Spec

Speaker Type	Bone Conduction Speaker	
Playback Time	Up to 6 Hours	
Charging Time	<3 Hours	
Standby Time	Up to 10 days	
Effective Distance	10m(33ft)	
Bluetooth Version	2.1+EDR	
Weight	43 grams/1.5 ounces	

Listening with headset at high volume may affect your hearing and the audio could be distorted.

me amd maintenance

headset in cool and dry place. The working temperature should be \$2-113° F). Working in cold/hot environment or highly humid area the life of battery.

starage for a long period, please charge the headset before using again. mediat is water resistant, but is NOT waterproof. Please DON'T put the water. Clean it with soft cloth if necessary.

the headset with a soft dry cloth.

the headset into contact with any sharp object.

leave the headset to extremely high or low temperature.

and specifications are subject to change without notice.

information on the product, please visit www.AfterShokz.com

Caution:

manges or modifications not expressly approved by the party responsible is a could void the user's authority to operate this equipment.

medice complies with Part 15 of the FCC Rules. Operation is subject to tollowing two conditions:

This device may not cause harmful interference, and (2) this device must any interference received, including interference that may cause mesired operation.

stevice and its antenna(s) must not be co-located or operating in conjunction any other antenna or transmitter.

sequipment should be installed and operated with minimum distance 20cm ween the radiator and your body.

is equipment has been tested and found to comply with the limits for Class B digital device, pursuant to Part 15 of the FCC Rules, These are designed to provide reasonable protection against harmful merference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in excordance with the instructions, may cause harmful interference to adio communications. However, there is no guarantee that interference not occur in a particular installation. If this equipment does cause narmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged try to correct the interference by one or more of the following measures:

- -- Reorient or relocate the receiving antenna.
- -- Increase the separation between the equipment and receiver.
- -- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- -- Consult the dealer or an experienced radio/TV technician for help.

Declaration of Conformity of Industry Canada

This device complies with Industry Canada licence-exempt RSS standard(s). Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device.

This Class [B] digital apparatus complies with Canadian ICES-003.

How to contact us?

AfterShokz, LLC 6311 Fly Road Suite 106 East Syracuse, NY 13057 sales@aftershokz.com www.aftershokz.com

Note:

If you need to return your product for repairs, replacement, or warranty service, please contact the AfterShokz Customer Support Center at: 1-315-218-0308 (United States).









