


Alcohol tester

User Manual

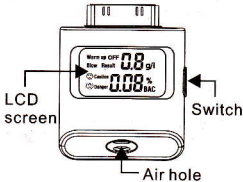

1. please connect this product to iPhone , then unlock iPhone, then press switch of tester for a long time till Tester alert short buzzing, at the same time LCD screen will appear matching indicator.

2. State "warm up" Number jump from 10 to 0 , it will finish preheating procedure.

3. When blow 10 seconds countdown, please close the tester's air hole and blow 3 to 5 seconds , after

finishing countdown ,display screen will show the test result.

4. If test report can reach to the scope below , "Caution" will show.
√ 0.02% BAC (or 0.2g/l) to 0.05% BAC (or 0.5g/l)
0.05% BAC (or 0.5g/l) to 0.08% BAC (or 0.8g/l)

5. If test report can reach to the scope below , "Danger" will show
√ over & EQUAL 0.05% BAC (or 0.5g/l)
over & EQUAL 0.08% BAC (or 0.8g/l)