


HD Color LCD Monitor

7" High Resolution On-Camera Field, Director of Professional Monitor

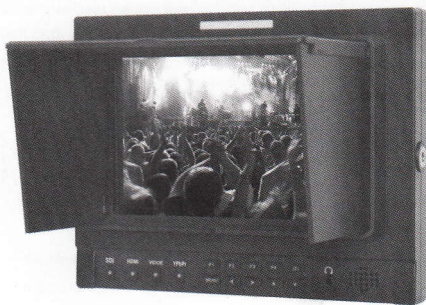

User manual

Dear users:

Thank you for purchasing our photography, broadcast HD-SDI LCD Monitor kit. This product employs digital signal processing circuit and professional TFT LCD screen. It's high brightness, low power consumption, stable performance and emits no radiation advantages, strong compatibility, adjustable color temperature control. Advanced features include Screen marker, CAMERA mode, Image magnification, Image flip and change, Monochrome mode etc. It is an ideal portable light weight frame supporting the monitor.

The monitor is not only with HDMI, COMPONENT (YPbPr), composite video, Audio signals input, also with HD-SDI input & output, to meet different customers' needs.

Product feature:

- ◆ Peaking focus assist(peaking filter)
- ◆ CAMERA mode: Canon 5D Mark II mode
- ◆ After exposures hint
- ◆ False Colors
- ◆ Image magnification/scaling, image flip function
- ◆ Picture in picture(PIP)function
- ◆ Line field blanking
- ◆ Brightness histogram
- ◆ Front earphone hole
- ◆ Monochrome display: color, black and white, red, green, blue, closed
- ◆ Aspect ratio: full screen, point to point, panoramic. Zoom 2, Zoom 1, 4:3
- ◆ Scan mode: standard, underscan, overscan
- ◆ Screen marker: off, 96%, 93%, 90%, 85%, 80%
- ◆ Screen Center Marker(cross mark) display setting
- ◆ Display pixel and the pixel point to point display
- ◆ Panel button function custom setting
- ◆ The current picture still, capture function
- ◆ LED backlight, image display brighter ,screen does not flicker

To insure best use of the unit, please read the user's manual carefully.

CAUTION


1. Please use the adapter attached in the accessory.
2. Do not expose this product to direct sunlight, heat or humid conditions
3. Keep away from strong light while using this product so as to obtain the clearest and the most colorful picture.
4. Please avoid heavy impact or drop on the ground.
5. Do not use chemical solutions to clean this unit. Please simply wipe with a clean soft cloth to keep the brightness of the surface.
6. Without adjustable component in the unit, please do not take apart or repair the unit by yourself, to avoid damage the product.

CONTENTS

1. Product description	3
1.1.Front panel view	3
1.2.Rear panel view	4
1.3.Side view	5
1.4.Battery Plates	6
1.5.Battery plates for various batteries	7
1.6.Power input way	7
1.7.Sun shade installation and remove	9
1.8.TALLY use and connect	12
2. Button operation instruction	12
3. Menu function introduction	14
4. Signal format form	19
5. Accessories	20
6. Parameters	21
7. Trouble shooting	22


9. **F2:** Custom button, see F4
10. **◀** : Volume down, in OSD menu for left adjustment, function confirm or decrease the value of analog on the menu
11. **F1:** Custom button, see F4
12. **MENU:** To activate or close OSD (on-screen display) menu
13. **YPbPr:** YPbPr Color difference signal input selection button
14. **VIDEO:** Composite video signal input selection button
15. **HDMI:** HDMI HD signal input selection button
16. **SDI:** Digital component serial signal input selection button
17. Sun shade slot
18. LCD display panel
19. TALLY(indicator)

1.2. Rear panel view

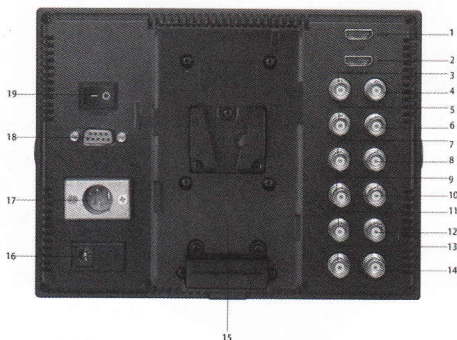

1. **HDMI OUT:** HDMI(High Definition Multimedia Interface) signal output
2. **HDMI IN:** HDMI(High Definition Multimedia Interface) signal input

19

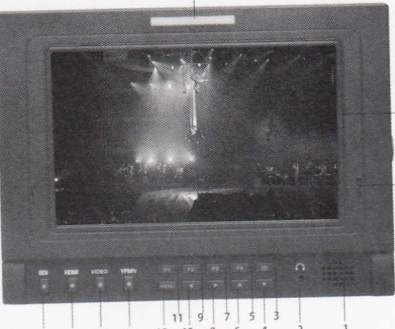

3. **Y IN:** Y signal input
4. **Y OUT:** Y signal output
5. **Pb IN:** Pb signal input
6. **Pb OUT:** Pb signal output
7. **Pr IN:** Pr signal input
8. **Pr OUT:** Pr signal output
9. **VIDEO IN:** Composite Video signal input
10. **VIDEO OUT:** Composite video signal output
11. **AUDIO IN:** Audio signal input
12. **AUDIO OUT:** Audio signal output
13. **HD-SDI IN:** Digital component serial interface signal input(optional)
14. **HD-SDI OUT:** Digital component serial interface signal output(optional)
15. **Battery Plate slot:**(According to the users' requirements selection)-see attached instruction
16. DC power input interface
17. 4-pin XLR DC power input
18. Tally(indicator) signal input
19. Power ON/OFF Switch: — Power On, ○ Power Off

1.3. Side view:



1. There are 1/4 thread mounting holes in the monitor, they are not only for

fix hot shoe mount, magic arm, but also convenient for customers' install sun shade

1.4. Battery plates:



F970



LP-E6



D28



Panasonic Anton Bauer



Sony V-Mount Plate

According to the different requirements of battery for the customers, attached different battery plate slots. NO requirements, the factory defaults assembly F970 battery plate.

1.4.1 Sony F970 battery slot for battery of Sony DV:

Sony F970 F960 F950 T930 F770 T750 F730 F570 F550 F530 QM91D
QM91 QM90D QM90 QM71D QM71 QM70D QM70 QM51D QM51
FM71 FM70 series

1.4.2 Canon LP-E6 battery slot for battery of Canon DV:

Canon LP-E6

1.4.3 Panasonic D28 battery slot for battery of Panasonic DV:

Panasonic D55 D54S D54SE D40 D35 D33 D32 D28 D25 D22 series

1.4.4 Sony V-mount camera battery Plate

1.4.5 Panasonic Anton Bauer battery Plate

1.5. Battery plates for various batteries

Three types of batteries corresponding to the upper three slots



F970



LP-E6



D28

Remark: Different specifications of the battery, capability is different. The working time for the monitor will be different. Higher capability (working time) will be longer.

1.6. Power input way

There are some ways to supply the power of the monitor:

1.6.1. The power supply by the adapter. 12V/1.2A is optional DC voltage changer, insert DC power input interface directly. It can be choosed qualified adapter which current with output voltage DC 6~18V, output capacity >15W by customers

Please note that the polarity of power input is inner POSITIVE, outer NEGATIVE. Otherwise will damage the product. (see attached image)!

Picture:



Please use the adapter attached in the accessories. If necessary to use other specifications adapter, please note to provide the qualified adapter which power supply should be not less than 15W (DC6V-18V)


1.6.2. This product also can be by 4-Pin XLD interface to use the power supplied from camera.

Pin Number	Signal
1	GND
2-3	NC
4	+12V




1.6.3. Another option of power source is using batteries. The product back case including battery slot is available for five types of batteries. Customers can choose different battery slots according to their needs. (NO requirements, the factory defaults assembly F970 battery plate)

● Battery install way as below picture

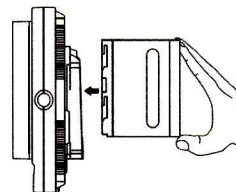

1

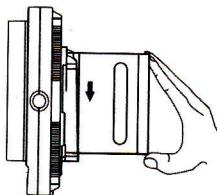

②

Suggestion: Better remove the battery for long-term NO use this product.

Different specifications of the battery, capability is different. The working time for the monitor will be different. Higher capability (working time) will be longer.

Without design charging circuit for the monitor, please remove the battery to the battery charger for charge.

CAUTION
RISK OF EXPLOSION IF BATTERY IS REPLACED
BY AN INCORRECT TYPE.
DISPOSE OF USED BATTERIES ACCORDING
TO THE INSTRUCTIONS


1.7. Sun shade installation and remove

1.7.1 Installation: Positive parallel alignment of the sun shade and monitor, the projection of the sun shade hanging claw at the monitor sun shade slot (see the monitor front view marked 17), pay attention to the left and right position should be aligned around inserted balanced slide down.(see picture)

• Sun shade installation picture


- ① The sun shade protruding hanging claws alignment the monitor sun shield slot, the position should be aligned with the left and right, send the

sun shade hung claw to monitor slot.

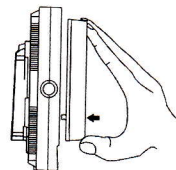


①

- ② Inserted around balanced slide down, match with sun shade and monitor

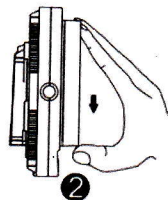


②

- ③ Please follow steps 1. 2. 3, otherwise will damage the cover, please do not press the L/R panel of the sun shade, if not, unable open the cover.

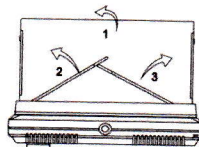


③

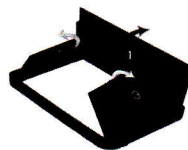


- 1.7.2 Remove:** When you want to sun shade is removed from the monitor, hands were clenched monitor and the sun shade, drag up sun shade from monitor, then separates the sun shade from the monitor.

● **Sun shade remove picture:**


① According to the following steps, close the sun shade in order

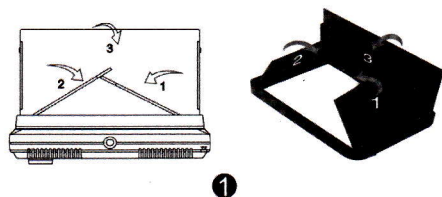


② Left and right balance to move sunshade, the hanging claw and slot separate.

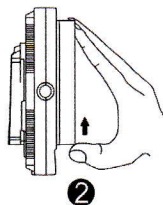

③ Remove the sun shade

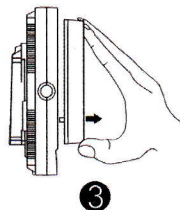

1.8. Tally use and connect

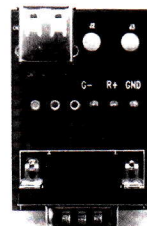

TALLY Kit

● **TALLY use and connect**

To use random TALLY kit connect TALLY signal line from the switching station as shown

Connection method:

1. Active connection: GND and G with 0-5V voltage wire shorted to ground access

When the voltage is 0.3-2.7V, green TALLY lamp lights

When the voltage is 2.8-5.5V, red TALLY lamp flashes

2. Passive connection: GND, R +, G all shorted red TALLY lamp flashes

● **Please note the connection method**

2. Button operation instruction

SDI → Digital component serial signal input selection

HDMI → High Definition Multimedia Digital Signal input selection

VIDEO → Composite video signal input selection

Ypbpr → Color difference interface video signal input selection

MENU → Menu button



< → Volume up, in OSD menu for left adjustment, function confirm or increase the value of analog on the menu

> → Volume down, in OSD menu for right adjustment, function confirm or decrease the value of analog on the menu

▲ → Enter menu operation for menu option and submenu up selection

▼ → Image still and menu operation down selection button. No

enter menu operation, press this button directly enables the movable picture still in the picture. Enter menu operation as menu option and submenu down selection

 → Photography mode. Using 5D2 or 550D and other similar camera, press the button , the screen image disappears after about 6-8 seconds, will return to full screen display image, then watch from framing of the screen image to the recording when there is no time difference, image NO distortion, NO black, NO delay, perfect without distortion

F1 → Custom button, can select(Screen marker, monochrome display, point to point, peaking focus assist, false colors filter, exposure, brightness histogram, scanning mode, center marker, segmentation, magnification) one of them as definition function, please set the system into menu.


F2 → Custom button, see F1




F3 → Custom button, see F1

F4 → Custom button, see F1

3. Menu function introduction

In the operating status, press button **"MENU"**, then enter into OSD mode.


Press the unit button **"▲"** or **"▼"** to select the options which you need: 

(display result)  (sound)  (system setting)  **F** (scan position adjust),


after select the button you need, press **"<"** or **">"** on the unit to confirm, if need to exit OSD menu, repress button **"MENU"**.

• Display result setting (this setting has 3 pages menu)

Press **"MENU"** key, pop up OSD menu as below, **"▲"** or **"▼"** to select

, press **"<"** or **">"** to confirm, press **"▲"** or **"▼"** to select the adjustment, then use **"<"** or **">"** to adjust or select the adjustment. Press **"MENU"** to exit.

◆ Menu page 1 picture

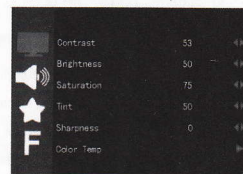

Contrast : To adjust the brightest and darkest ratio of the image

Brightness: To adjust the image's brightness


Saturation: To adjust the saturation

Tint: Adjustment of the NTSC signal in the composite video mode, the other mode is invalid

Sharpness: To adjust the depth to the image

Color Temp: Use the adjustment the color temperature can be pre-set (user, 6500K, 7300K, 9300K)

◆ **Menu page 2 picture**

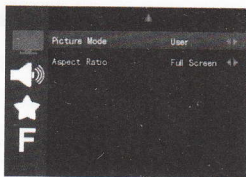


Picture Mode: the image brightness, standard, soft, the user (the contrast, brightness, color settings) effect settings

Aspect Ratio: full screen display, point to point, panoramic. Zoom2, Zoom 1, 4:3 mode selection

● **Sound setting**

Press "MENU"key, pop up OSD menu as below, "▲"or "▼"to select

, press "◀" or "▶" to confirm, press "▲"or"▼" to select the adjustment, then use "◀" or "▶" to adjust or select the adjustment. Press"MENU" to exit.

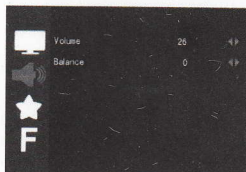

Volume: To adjust the volume


Balance:To adjust 2-channel(L&R)

● **System setting** (This setting has 3 pages menu)

Press "MENU" key, pop up OSD menu as below,"▲"or"▼"to select

, press "◀" or "▶" to confirm, press "▲"or"▼"to select the adjustment, then use "◀" or "▶" to adjust or select the adjustment. Press"MENU" to exit.

◆ **Menu page 1 picture**

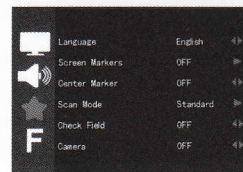

Language: Chinese, English

Screen Marker : Picture framing marker selection frame(off,96%, 93%, 90%, 85%, 80%)

Center Marker: Screen center marker(cross marker)display setting

Scan Mode: To deal with special image(standard, overscan, underscan)

Check Field: Color, black and white / monochrome switching, to switch image color, black and white, monochrome (red, green, blue)

Camera : Canon 5D II or similar camera when shooting, image NO deformation, NO black, NO delay, perfect without distortion

◆ **Menu page 2 picture**

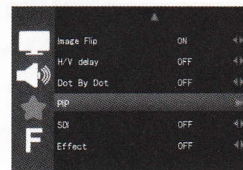


Image Flip: the U/D, L/R of the image around flip

H/V delay: H/V delay optional switch

Dot By Dot: In the video, the point to point display. Observing the image


more clearly

PIP: To display two inputs signal picture at the same time, can adjust picture position, size, picture interchange, double picture, picture out picture mode

S D I: HD SDI switch option(for with SDI input port modes, other modes select close)

Effect: Menu display effect

◆ Menu page 3 picture

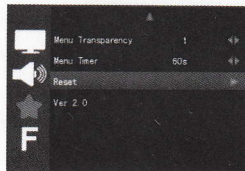

Menu Transparency: To select the OSD display effect

Menu Timer: To control the automatic disappearance time after menu pop up

Reset: On system parameters and settings recover factory settings


Ver 2.0: Menu software version number

● **F** Custom button and scan setting(This setting has 2 pages menu)

Press "MENU" key, pop up OSD menu as below, "▲" or "▼" to select

F, press "◀" or "▶" to confirm, press "▲" or "▼" to select the adjustment, then use "◀" or "▶" to adjust or select the adjustment. Press "MENU" to exit.

◆ Menu page 1 picture

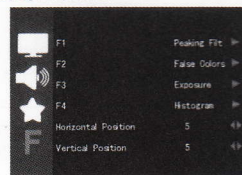

F1: The corresponding panel button F1 custom button function definition of choice setting(Screen marker, monochrome display, point to point, peaking focus assist, false colors filter, exposure, brightness histogram, scanning mode, center marker, segmentation). The user can enter submenu select one item, press the "MENU" is identified as the button function.

F2: The corresponding panel button F2 custom button function definition of choice setting


F3: The corresponding panel button F3 custom button function definition of choice setting

F4: The corresponding panel button F4 custom button function definition of choice setting

Horizontal Position: To adjust the image display(L/R)

Vertical Position: To adjust the image display(U/D)

◆ Menu page 2 picture

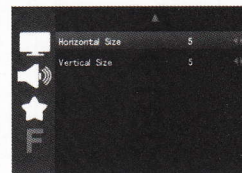

Horizontal Size: To adjust the image L/R stretch

Vertical Size: To adjust the image U/D stretch

3. Signal format form

Signal format form	
Video signal	Support signal format
Composite video	PAL/NTSC auto recognize
Component (Y/Pb/Pr)	1080i/ 50i/ 60i/ 50p/ 60p; 720i/ 50p, 720i/ 60p ; 480i, 480p; 576i, 576p;
HDMI	1080i/ 24i/ 24p/ 25i/25p/ 30i /30p/ 50i/ 50p/ 60i/ 60p; 720i/ 50p, 720i/ 60p ; 480i, 480p; 576i, 576p;
SDI(optional)	1080i/ 24i/ 24p/ 25i/25p/ 30i /30p/ 50i/ 50p/ 60i/ 60p; 720i/ 50p, 720i/ 60p ; 480i, 480p; 576i, 576p;

SDI support mode

Serial No.	Resolution	Mode
1	1080P@60HZ/59.94HZ	3G
2	1080P@50HZ	3G
3	1080i@60HZ/59.94HZ	HD
4	1080i@50HZ	HD
5	1080P@30HZ/29.97HZ	HD
6	1080P@25HZ	HD
7	1080P@24HZ	HD
8	720P@60HZ/59.94HZ	HD
9	720P@50HZ	HD
10	720P@30HZ/29.97HZ	HD
11	720P@25HZ	HD
12	720P@24HZ/23.97HZ	HD
13	480i@60HZ/59.94HZ	SD
14	576i@50HZ	SD
15	PAL	SD
16	NTSC	SD

F970 battery plate	1pcs
TALLY kit	1pcs
Sun shade	1pcs
Hot shoe mount	1pcs
HDMI cable(HDMI to Mini HDMI)	1pcs
User manual	1pcs

6. Parameters

Panel size	7" TFT LCD
Pixel	1280 (H) × 800 (V) pixels
Dot pitch	0.117 (H) × 0.117 (V) mm
Brightness	350 cd/m ²
Contrast ratio	800:1
Response time	15 ms
Viewing angle	89° / 89° (L/R) 89° / 89° (U/D)
Display ratio	16:9 / 4:3 (adjustable)
LED backlight	LED
Input voltage	DC 6 ~ 18 V
Input signal	(3G-SDI, HD-SDI, SD-SDI, option) HDMI, Component Ypbpr, Composite Video, Audio
Output signal	(3G-SDI, HD-SDI, SD-SDI, option) HDMI; Component Ypbpr; Composite Video; Earphone monitoring; Audio
Power consumption	≤ 12.0 W
Special function	TALLY indicator
Working temperature	-10 ~ 55°C
Storage temperature	-20 ~ 65°C
Unit size (mm)	215 L × 162W × 62 H (with sunshade cover, F970battery plate F970)
Unit weight	780±20 g (with sunshade cover, F970battery plate F970)

7. Trouble shooting

If there is any problem using the unit. You can try follow ways to inspect and solve

● Without image display

Trouble shooting

◆ Video cable off or connect incorrectly	Check the quality of the cable, make sure the correct input interface
◆ Without video signal input	Check the signal source and output interface connect is correct or not
◆ Monitor is not be powered on	Check the power whether connected, put the power switch to "on" position
◆ Supply voltage instability	The power adapter or battery is poor connected with battery plate
◆ The power use is self-made, polarity connect inversely	Reference "Power input way" reconnect

● Image/color display abnormal

Trouble shooting

◆ Video cable poor contact	Change video cable, try again
◆ Video signal interfered from external environment	Move to another environment to try again
◆ Video input signal amplitude too low	Check signal source video output, or change signal source have a try.
◆ Menu color saturation adjustment closing	Enter menu check color, or reset to factory settings
◆ B/W set in monochrome or black & white	Press the B/W button, back to the color
◆ Image deformation	Reset the ratio

● Speaker without sound

Trouble shooting

◆ Audio cable off or connect improperly	Confirm connected with the corresponding input end
◆ Volume adjustment was closed	Reset the volume control is adjusted to a proper position
◆ HDMI cable poor connected	Check the quality of cable, or change cable have a try

◆ No sound after switch video signal	This monitor with audio signal only in audio input and HDMI
◆ Video without sound output	A normal phenomenon. Because in the recording process, in order to avoid the sound field monitor and a voice of harassing together was also recorded in, so the camera itself is no sound output. Only in the playback when a sound output.

■ Remark:

If there are still other problems, please contact with our related deals.

If there are changes without prior notice.