




# Eye4 Smart Cloud

## User manual

### Connect the device

Connect the power adapter to the camera, then using network cable connect camera with WiFi router. Check the network power indicator (yellow) and network indicator (Orange).

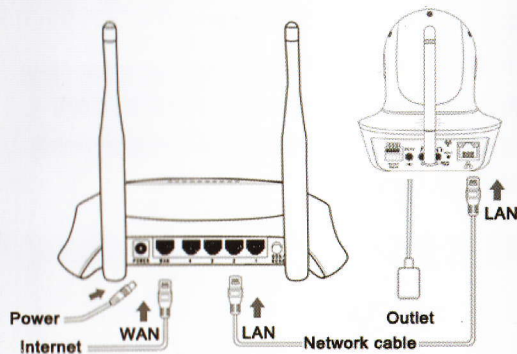

**⚠ Attention:** Please use provided power plug to avoid damage.

Note: press the button on the bottom of the camera for 10 seconds can reset back to factory setting.

### Install Android/iOS APP

Three methods of installation:

1. Search Eye4 in Google Apps Marketplace/App Store to download.
2. Go to [www.eye4.so](http://www.eye4.so) download.
3. Scan the UID code



## Get an Eye4 account

Register an Eye4 account

1. Open Android/iOS APP, click register.
2. Enter the user name, password to complete registration.

## Add camera

Click “+”, enter into camera add interface.input camera ID

- ① Search: find the IP cameras in the same WiFi network as the mobile phone.
- ② Scan UID code: point the phone camera to the UID code, after a “bee” sound, scan success.
- ③ Input the camera password: (default password: 888888)
- ④ Click Finish button, camera add success.



## Delete camera

Click More in camera setup, choose the camera list , then delete.

## View Video

Wait for a few seconds after camera added.

Camera status explanation

Connecting	Camera is connecting, due to the network condition, connecting time requires differently.
timeout	connection timeout
offline	camera is offline, please check the device connection.
Unknown	No data received, please refresh the status.
Invalid ID	Incorrect UID, please input again.
online	Device is connected, click▶ to view the video.

## Video interface description

- ↔ left/right cruise
- ↑ UP/down cruise
- ⊙ Picture setting. Set image contrast, brightness, and others.
- Preset
- 🔊 Listen off 🔊 Listen
- 🔊 Talk off 🔊 Talk
- 📷 Snapshot, can browse picture in [🖼️ video picture]
- 📺 Recording, videos can be viewed in [🖼️ video picture]
- 🔄 Screen Rotation

## Camera setup

More---Camera setup---choose the camera

## Connect camera wirelessly

More>camera setup> WiFi setup, the system will auto search the available WiFi signal, then choose the correct WiFi, connect.

Unplug the network cable during the camera restart process.

## Use Windows APP

Please check on [[www.eyec4.so](http://www.eyec4.so)] for more information

