

FUNCTION

1. Mixing

- Mixing and weighing in one go.
- When a recipe calls for several ingredients to be mixed, the mixing bowl allows building their mix according to the recipe in the same bowl using the tare function.

2. Weighing Measurement

- Auto zero, add and weigh ability, and auto power-off
- Maximum capacity: 5.01kg (11 lbs)
- Weight unit: grams & ounces/pounds

3. Volume Conversion

- Volume capacity: 2 liter (9 cups)
- Automatically converts 5 pre-set ingredients (flour, sugar, milk, water & oil) from weight to volume
- Volume unit: ml, cups, fluid ounces

4. Wireless transmission

- Automatically connect with iPhone, do not need to match
- More than 8000 kinds of food for choose, display 10 kinds of nutrients
- Transmission distance up to 8-10 meters for iPhone, other phone brand maybe different.

TECHNICAL VALUES

Measuring Range:	0g~1kg	1kg~2kg	2kg~3kg	3kg~5kg
Measuring Accuracy:	+/-5g	+/-10g	+/-30g	+/-50g
Display Resolution:	1 g/ml $\frac{1}{8}$ oz $\frac{1}{8}$ cup/lb			
Battrey:	2 x AAA batteries			
PP Bowl Standard:	Conforms to food grade security examination standard			


FEATURES

- Made from high quality durable plastic
- Easy to read LCD digital scales measures both liquid and dry ingredients
- Automatic volume conversion for flour, sugar, water, milk and oil
- Allows addition and measurement of multiple ingredients
- Measures up to 5.05kg (5 Liters) in 1g (1 ml) increments
- Switches between metric and imperial units
- Low battery indication on the LCD scale
- Requires 2 x AAA batteries (NOT included)
- Wipe clean with a damp cloth
- Removable mixing bowl is dishwasher safe

DOWNLOAD & INSTALL SOFTWARE



Open "App store" software from iPhone

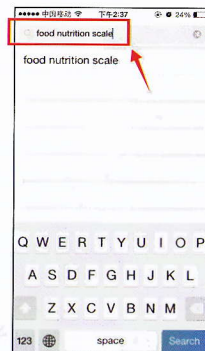

Search "food nutrition scale" software



Download & install the software




Open "food nutrition scale" software

APP INTERFACE INTRODUCTION

Automatically connect, do not need to match




Switch the scale on, auto zero and automatically connect with iPhone, then put in the food

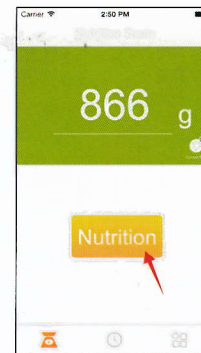

"Nutrition Scale" interface will show the food weight, then press "Nutrition" button, enter into "Food Category" interface




Choose or search the food name, then press the food name you want

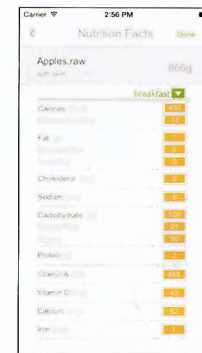


"Nutrition Facts" interface will show the nutrition data

APP INTERFACE INTRODUCTION

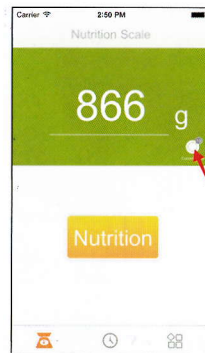


Press "Current Plate", enter into "Food Combinations" interface, which record the food nutrition data you search today.

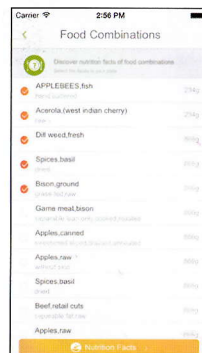

Press the clock, enter into "Food Diary" interface, which record the foods you eat and the foods calories you take in every meal

PRODUCT DESCRIPTION

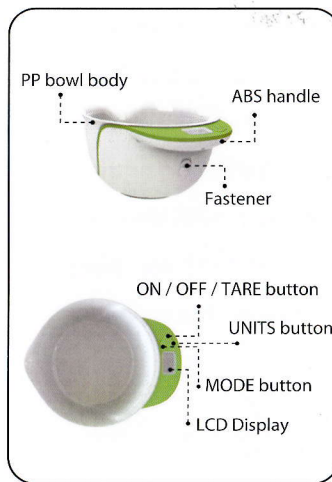


How to join measuring bowl & handle
Align the measuring bowl with fastener on the handle, push down the measuring bowl vertically. If hear "da" sound, it success for combination.



How to separate measuring bowl & handle
Push the fastener up, fetch the bowl vertically. Note: The bowl can be washed in warm soapy water.





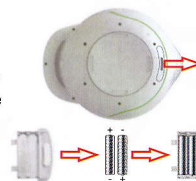




How to install battery
Push out cell box, and put 2 pcs AAA battery inside the box, then push the cell box into the rabbit. Note the direction of anode when put the battery inside the box.





OPERATION INSTRUCTION


Measuring weight:

1. Keep the bowl placed on a level desk. Press "", the LCD show "", after 3 seconds when LCD shows "", the scale bowl will automatically remove tare and weight value will return to zero.
2. Measuring bowl is " " mode without any settings; initialization of the units is grams and oz. If there is no operation within 3 minutes, auto-shut off.
3. When measuring bowl is working, press " " to change the food you weigh; press " " to change the unit. Long press " " to turn off the measuring bowl.

OPERATION INSTRUCTION

Multiple TARE measuring:


Use multiple TARE function if you need to take two or more food on that has different weights together. After finish to weigh one kind of food, press " " button then LCD show " ", the measuring bowl will remove tare again and value return to zero after 2 seconds. You could put in and weigh the other type of food.

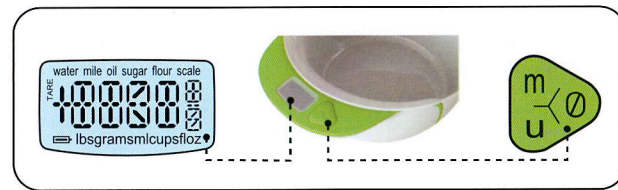

ATTENTION

Keep the measuring bowl on the level place and let weight value return to zero before start measuring. Max weight is 5010grams, LCD will show

“  ” if over.

When the battery is in low power, LCD will show “  ”, then please change the battery.

Remove bowl from handle before cleaning.

Do NOT use water to clean the handle,

If the product does not function properly, please remove the battery, reinsert the battery and turn product on.

Note: Retain For Future Reference